7. SGH-E820 Flow Chart of Troubleshooting

1. Power On

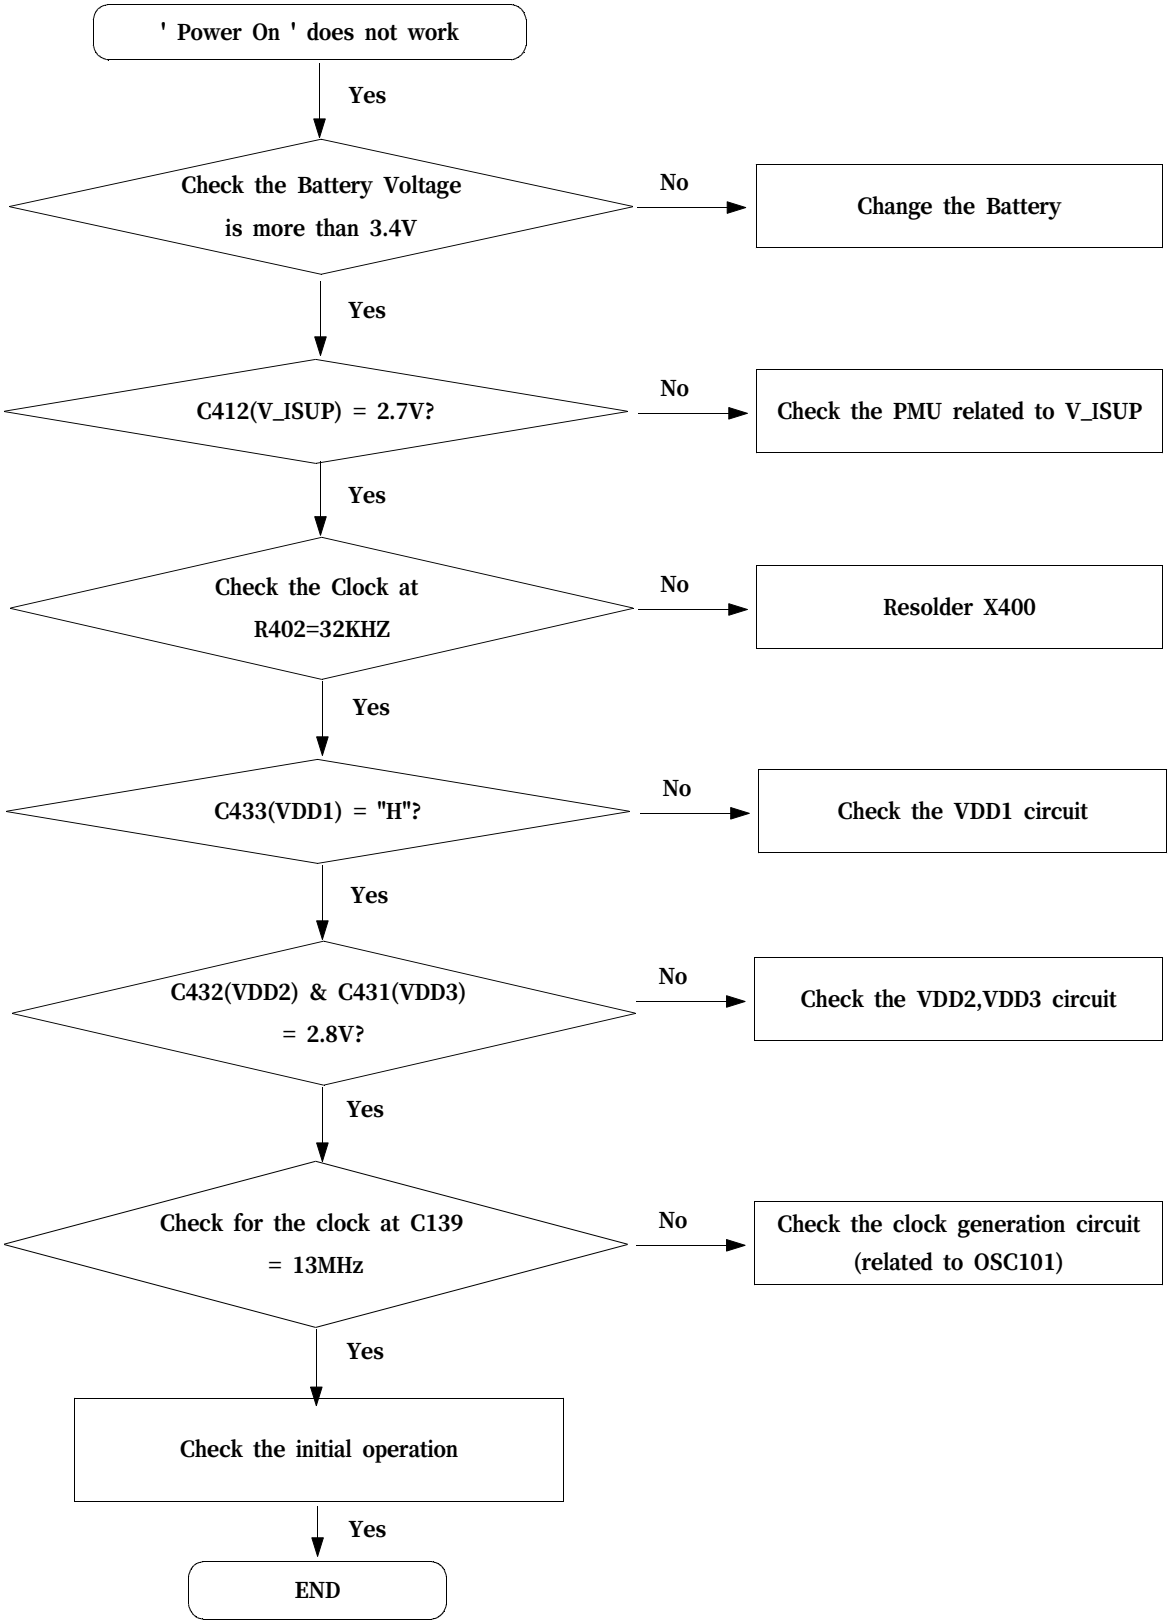

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

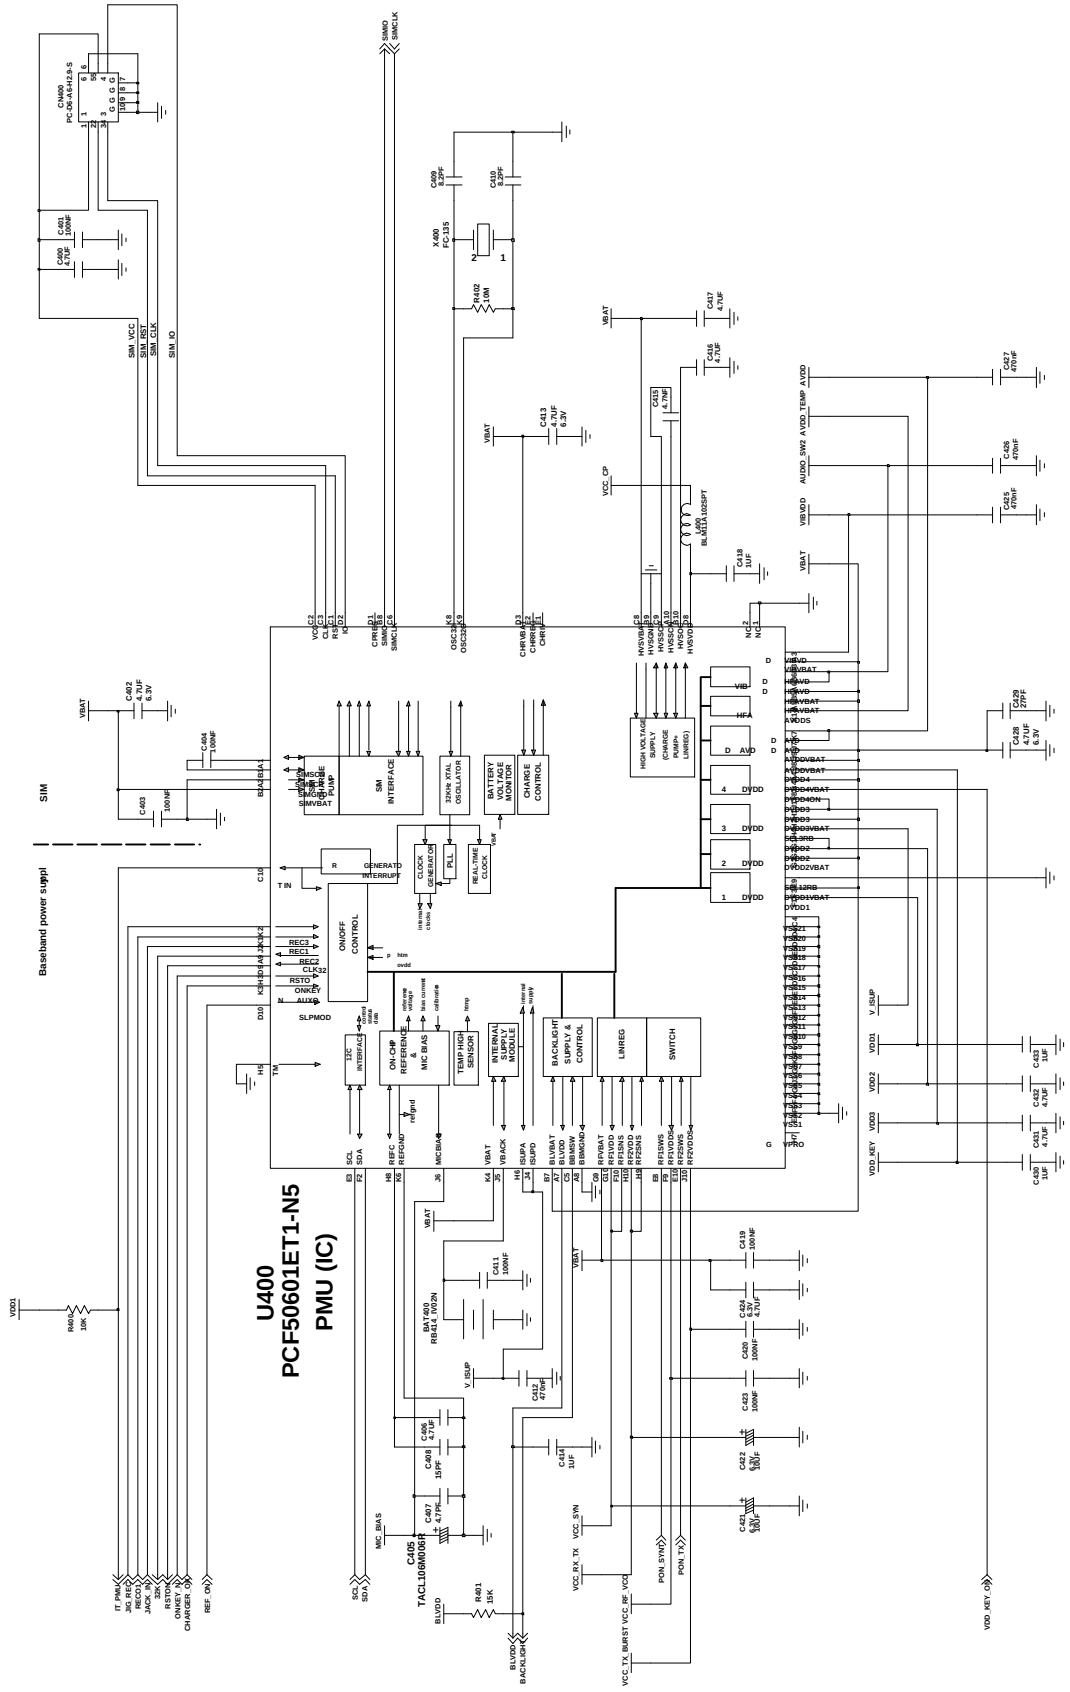

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

2. Initial

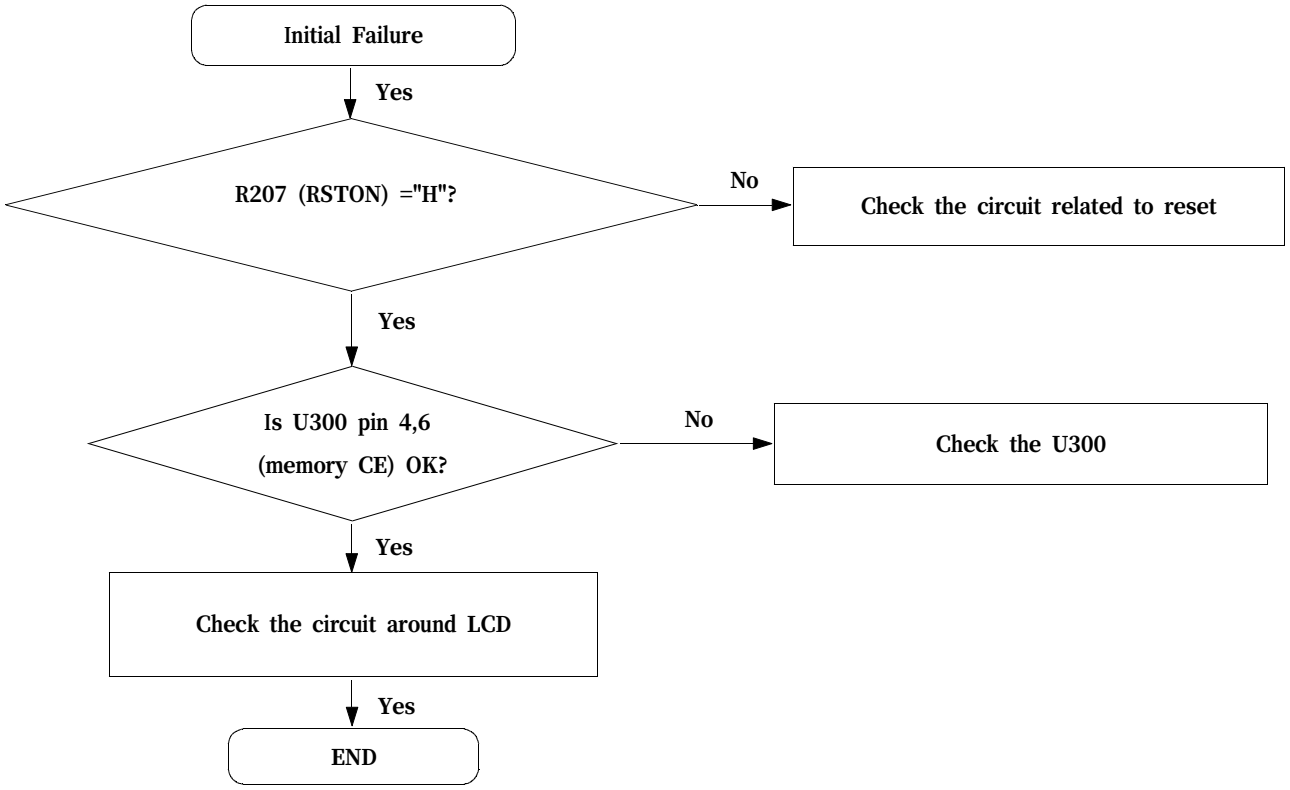

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

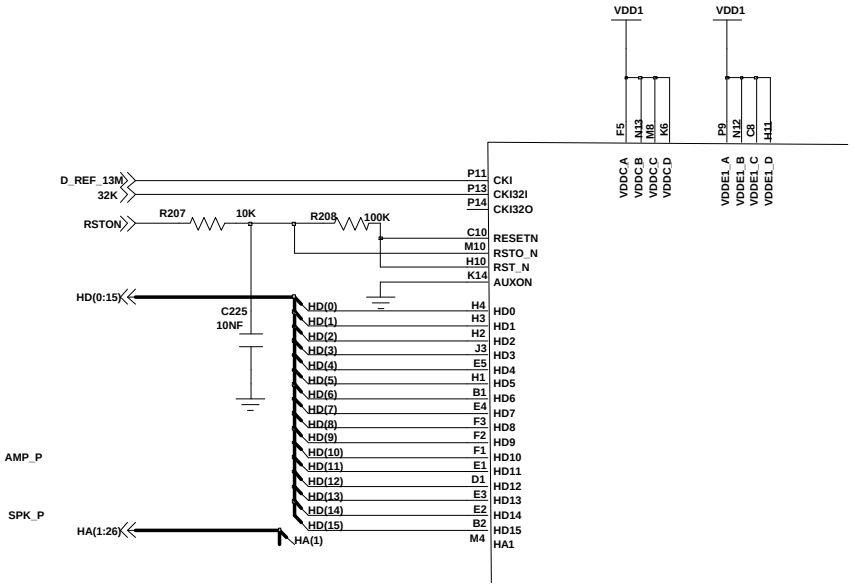

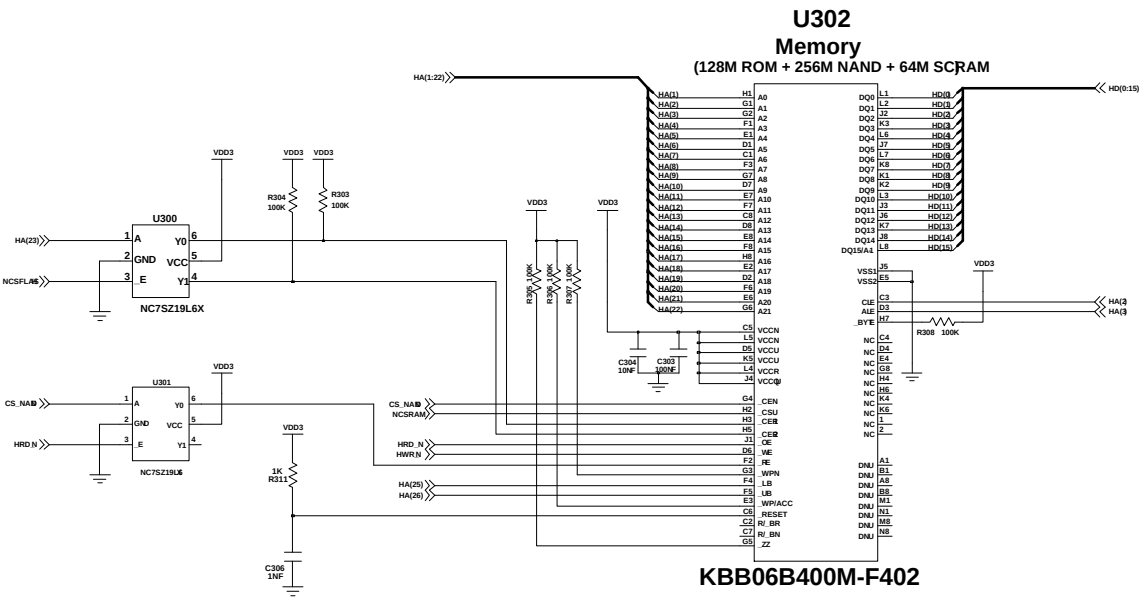

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

3. Charging Part

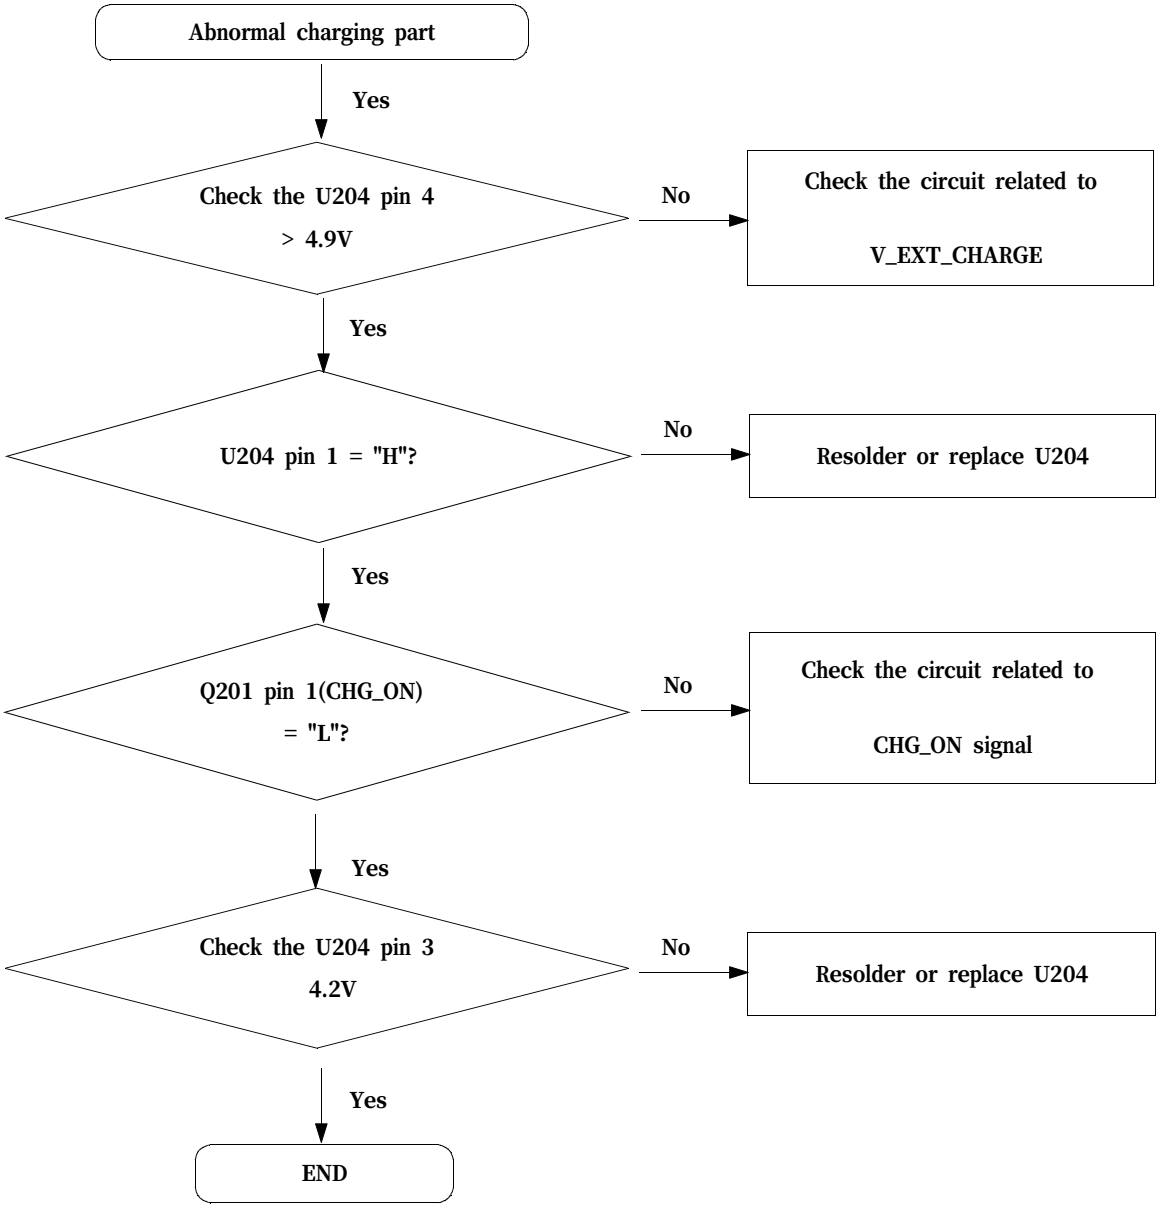

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

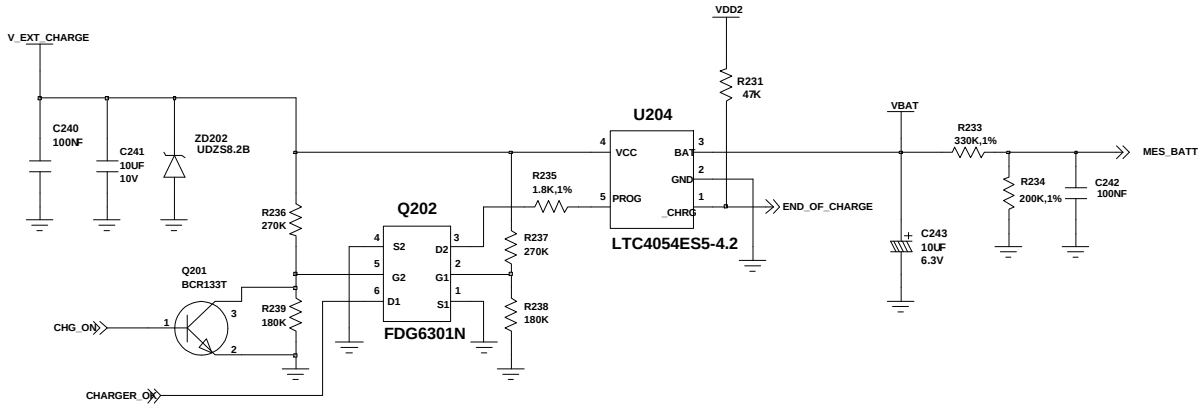

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

4. Sim Part

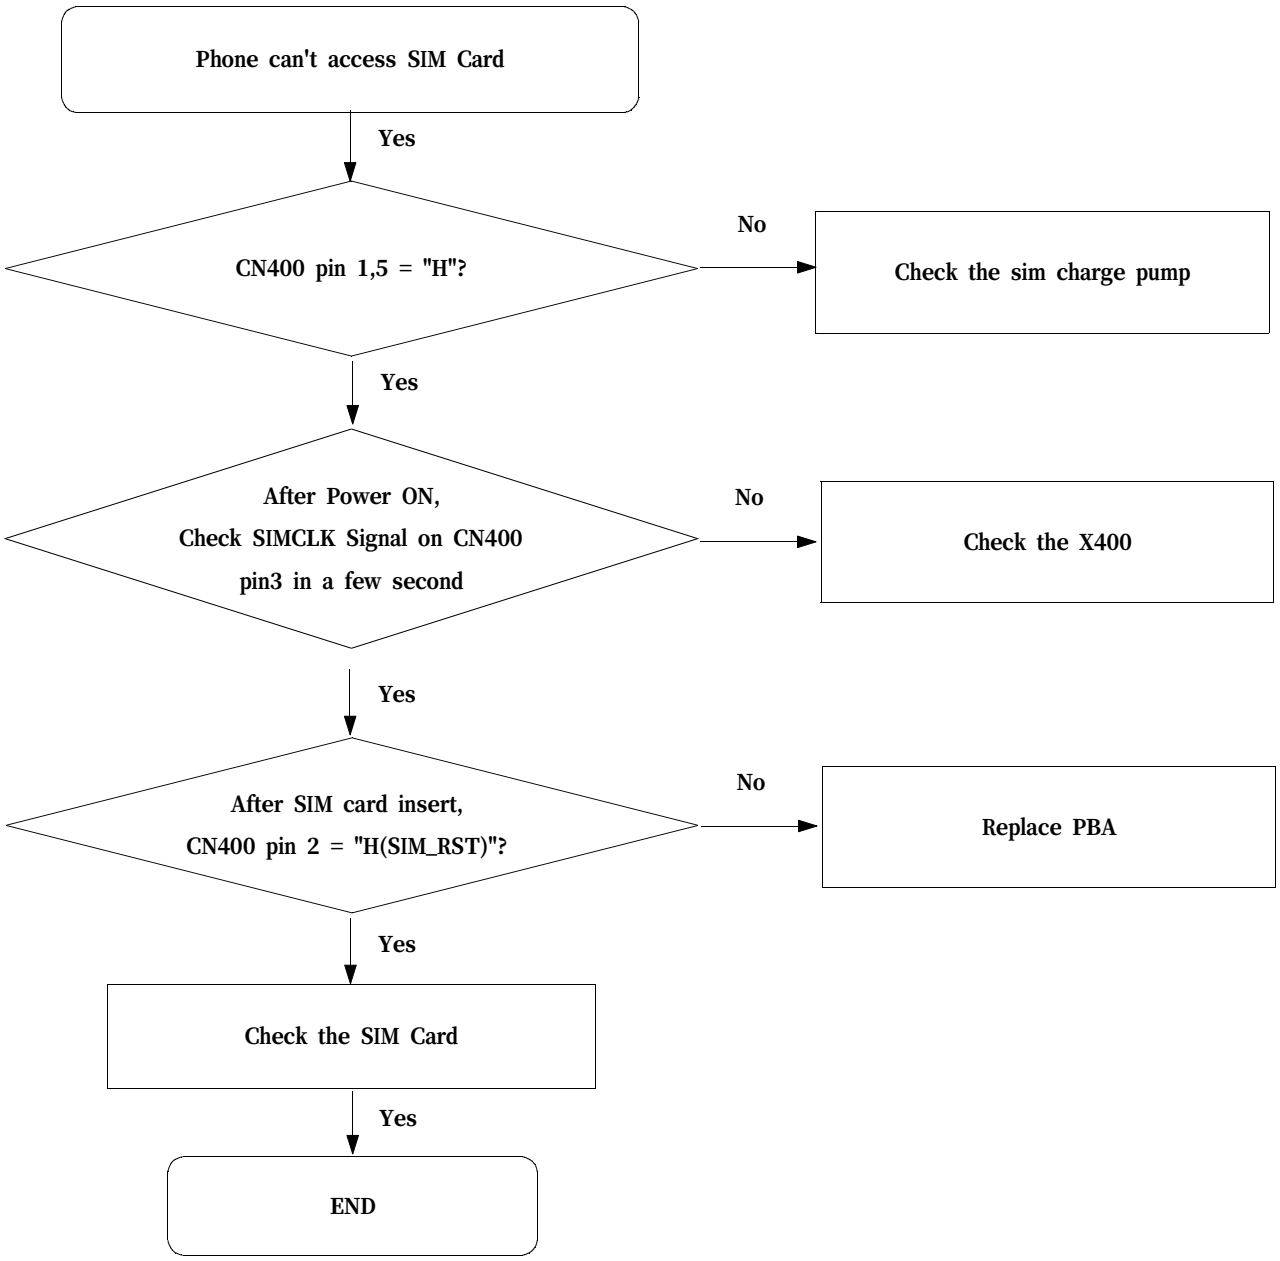

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

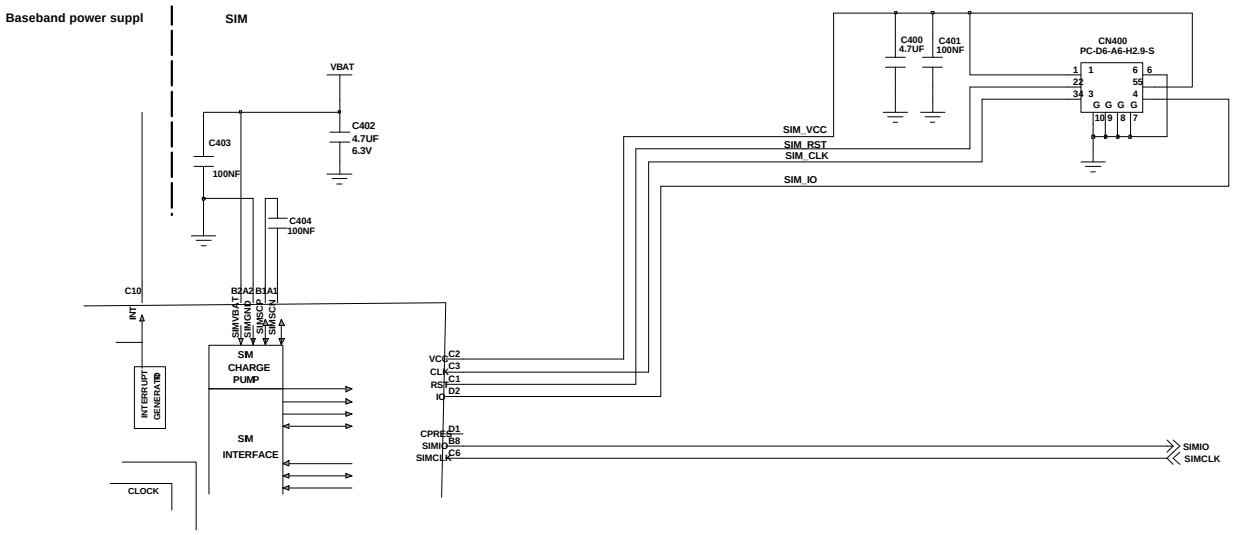

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

5. Microphone Part

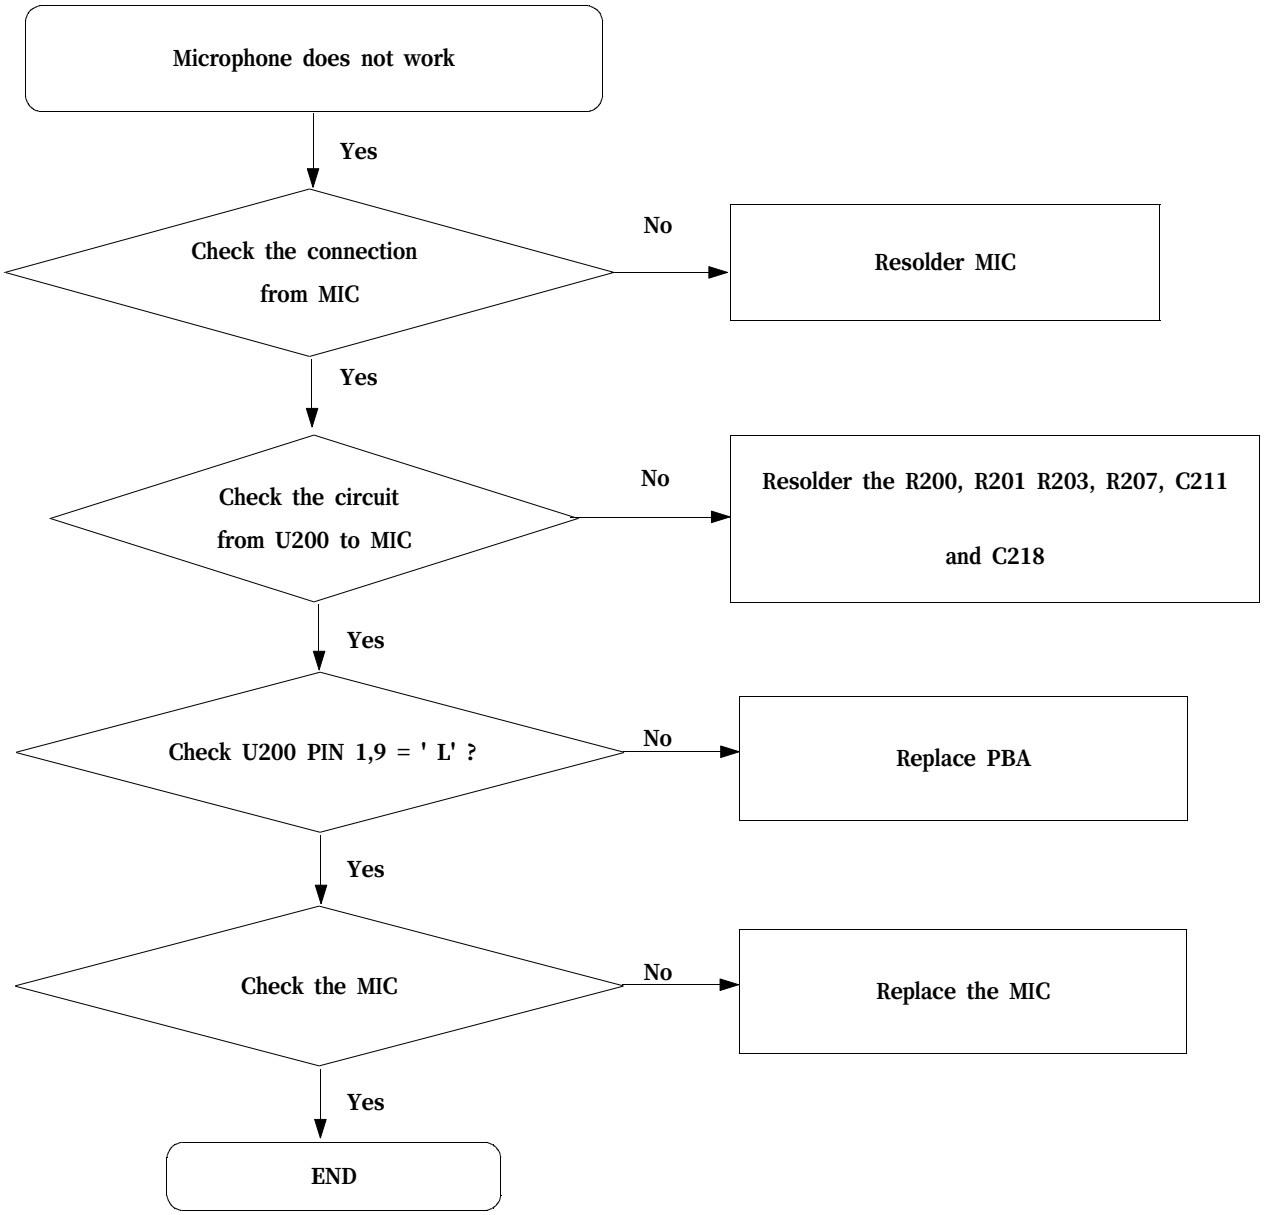

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

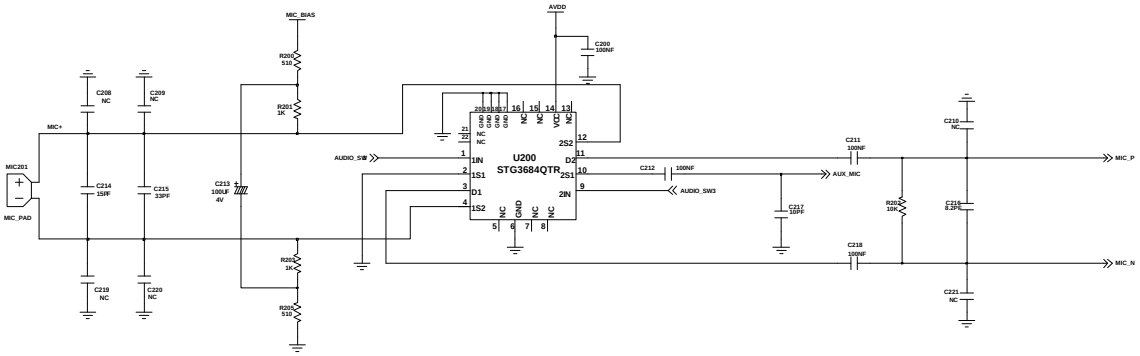

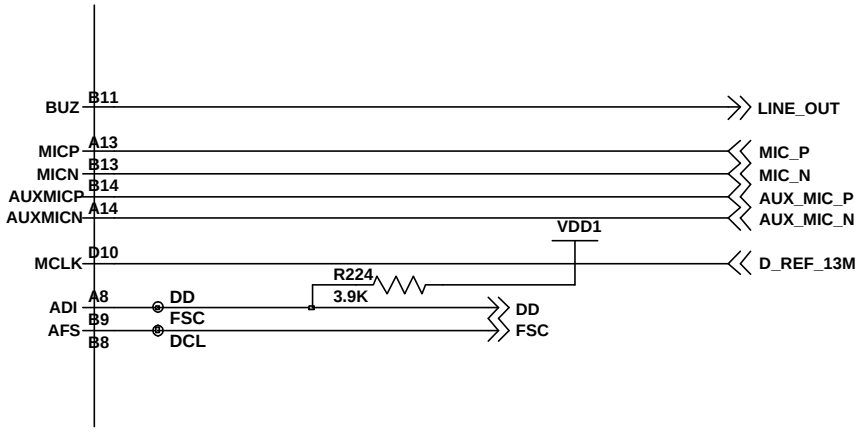

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

6. Speaker Part(Melody)

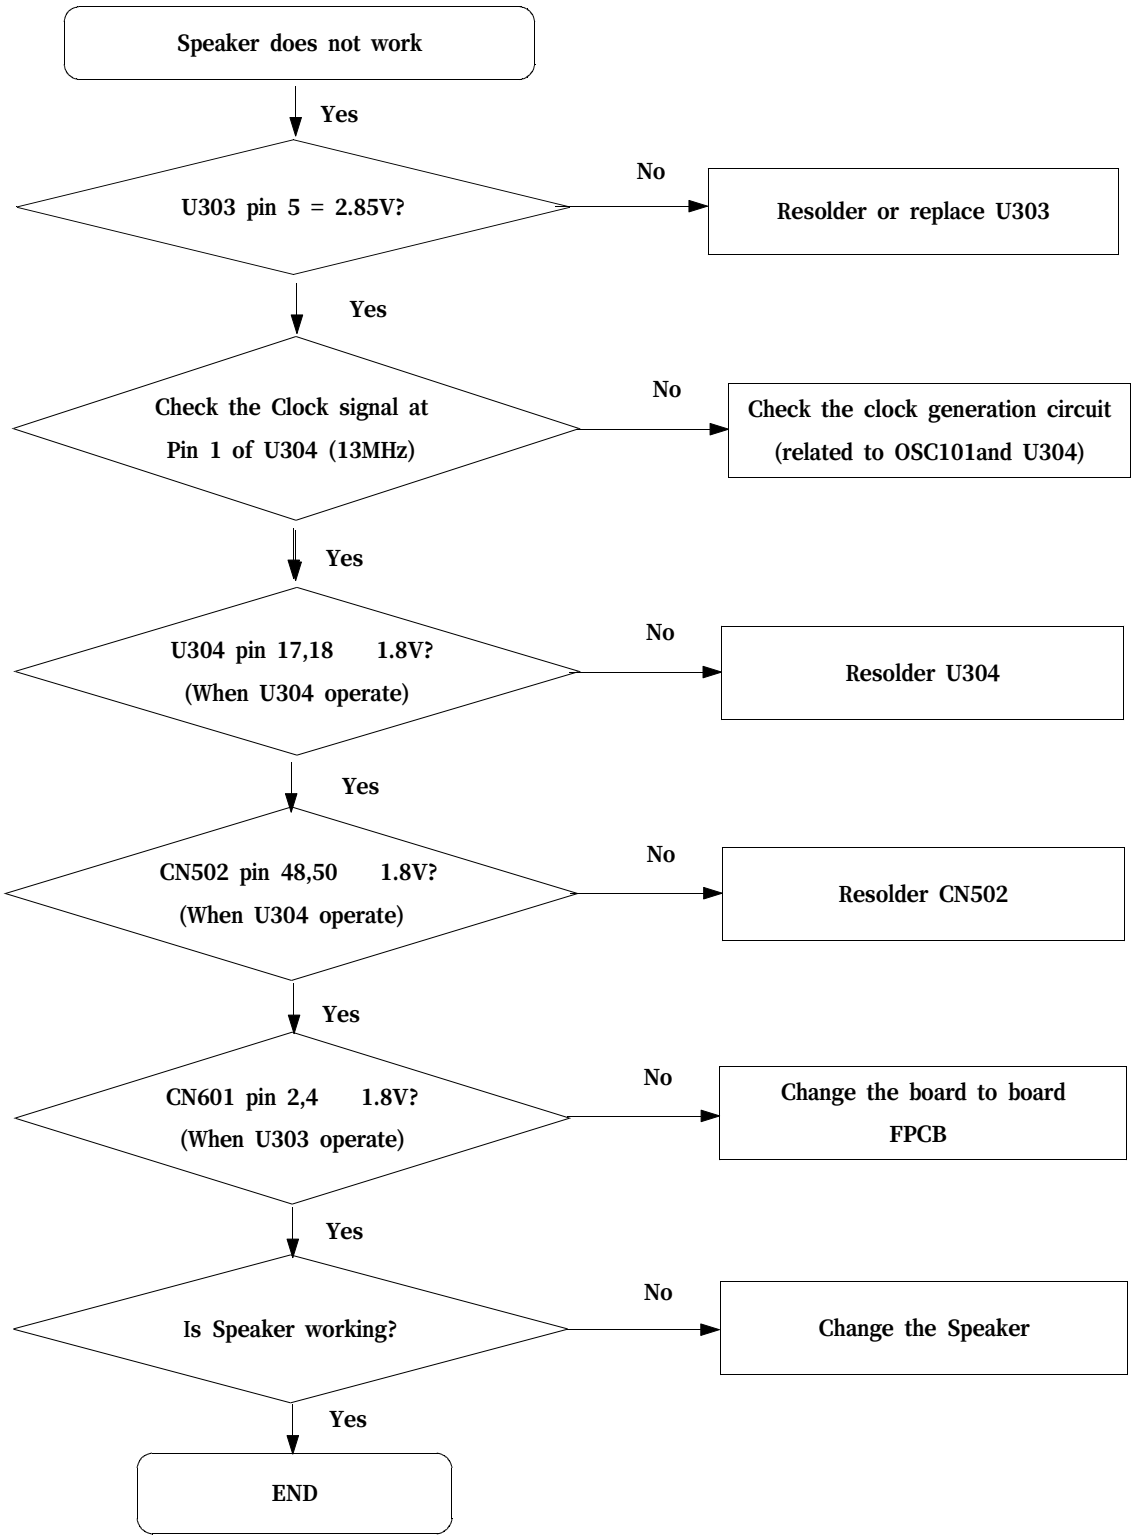

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

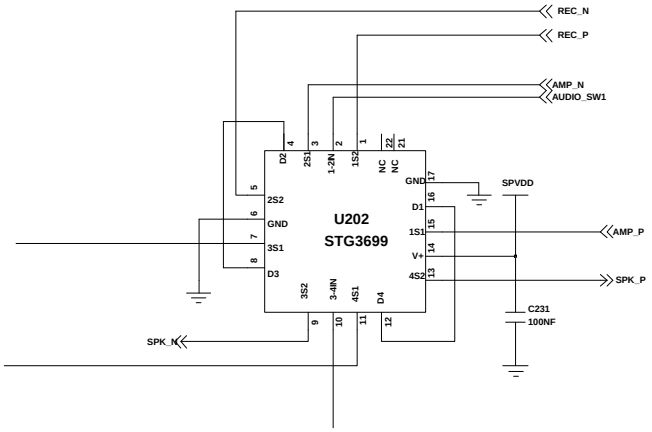

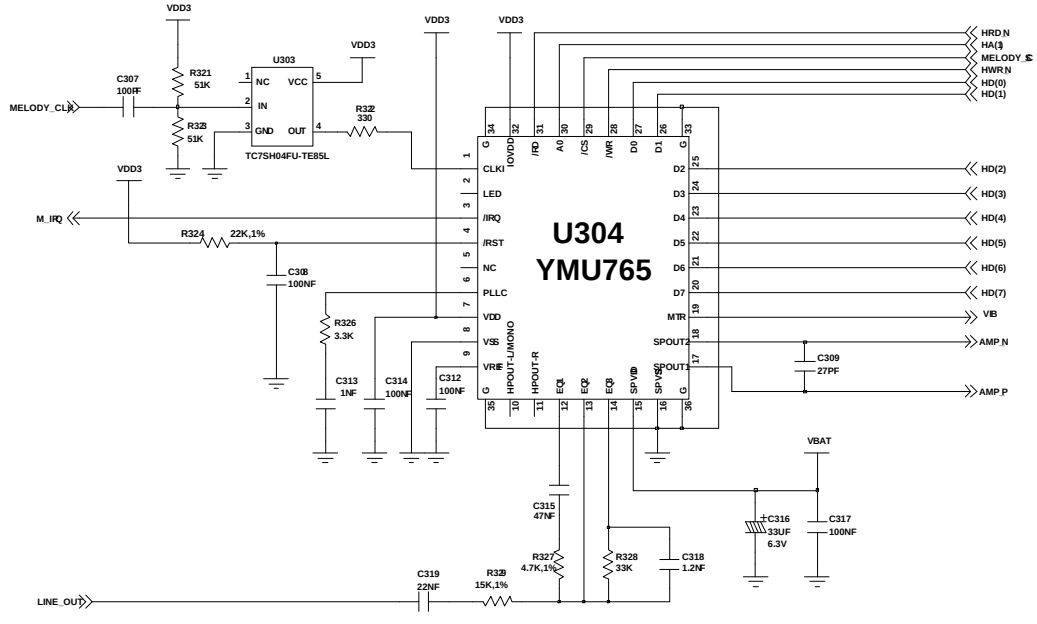

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

7. Key Data Input

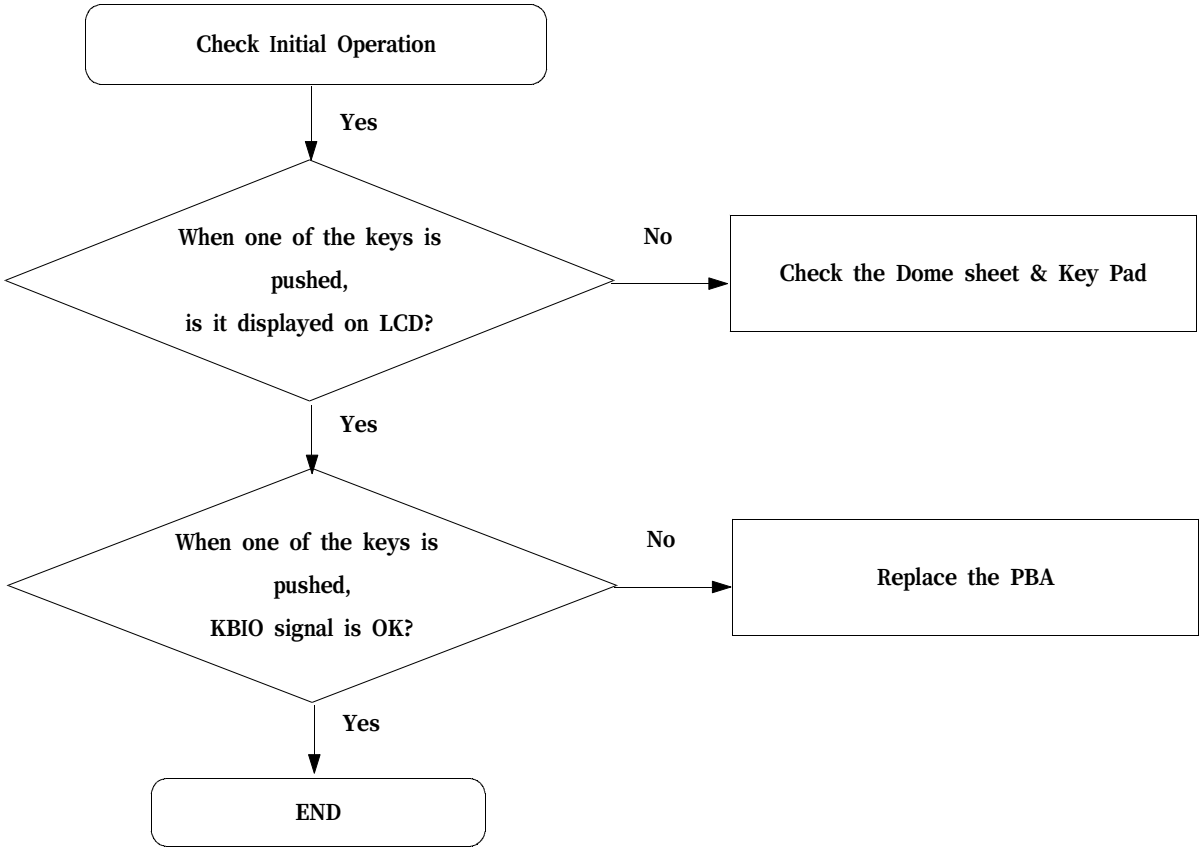

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

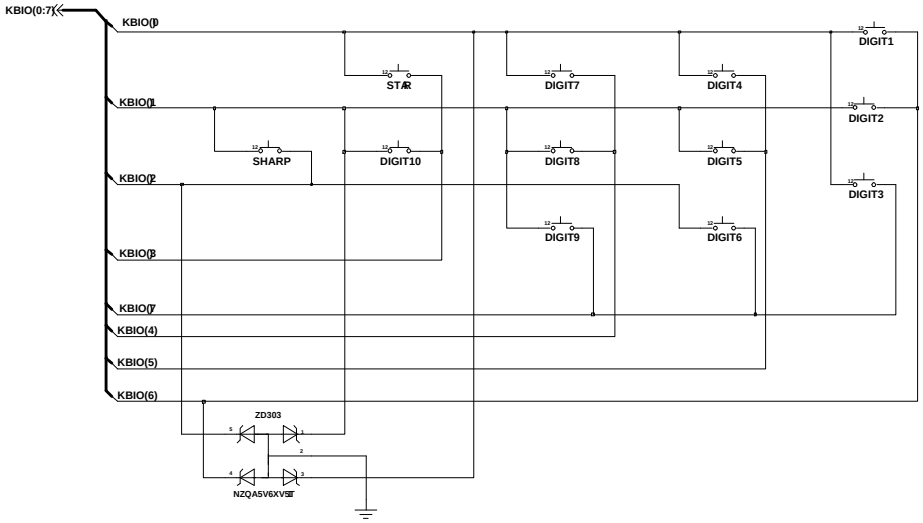



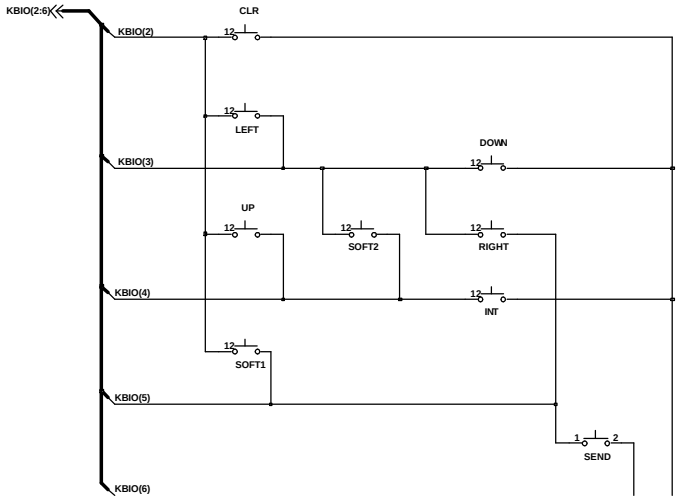

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

8. Receiver Part

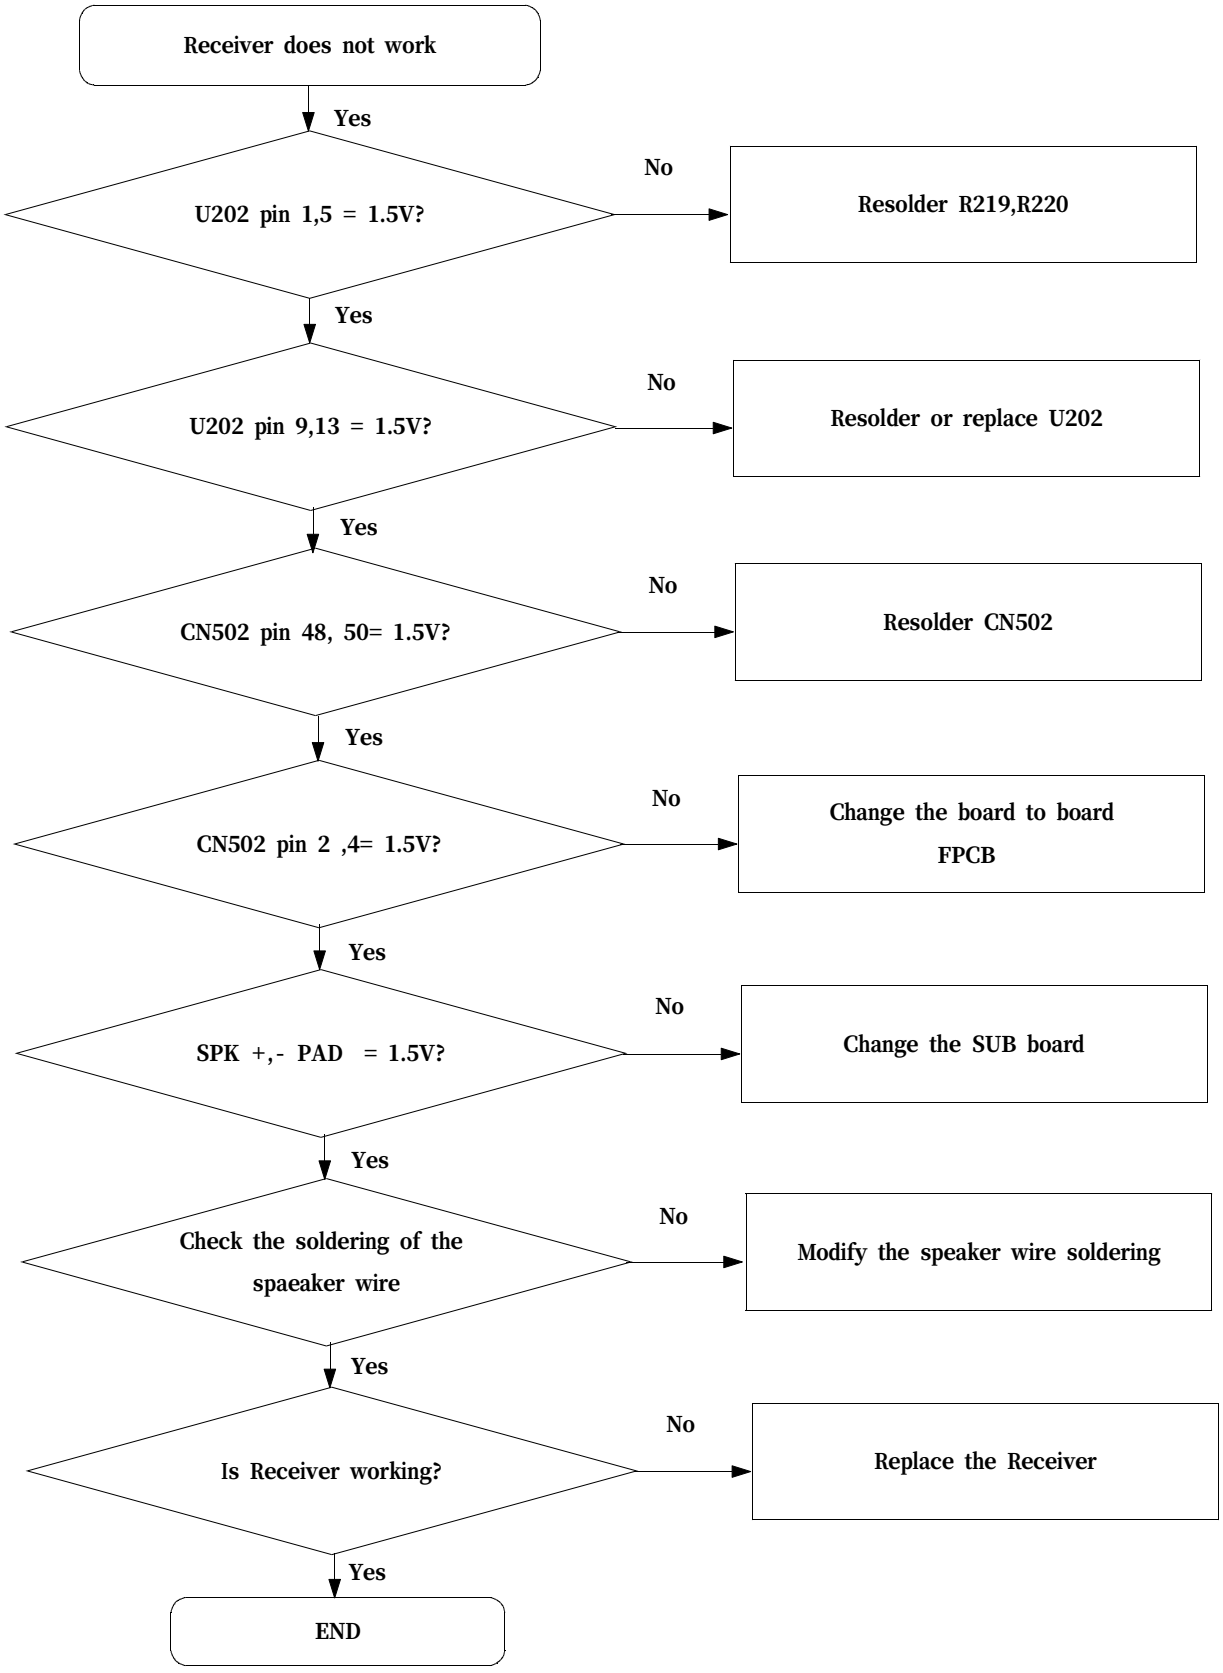

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

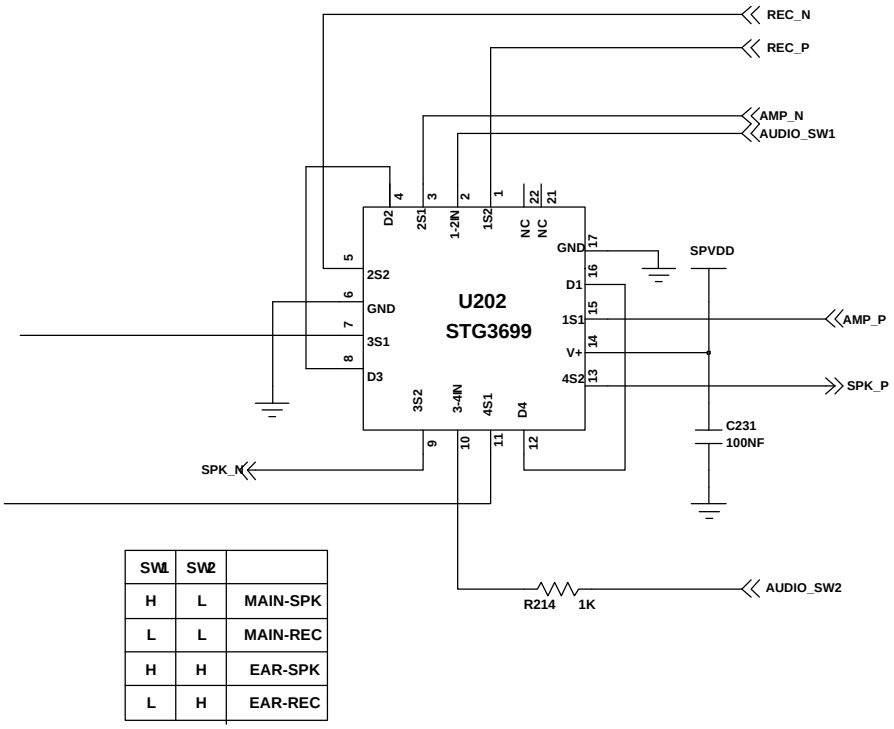

SW1	SW2	
H	L	MAIN-SPK
L	L	MAIN-REC
H	H	EAR-SPK
L	H	EAR-REC

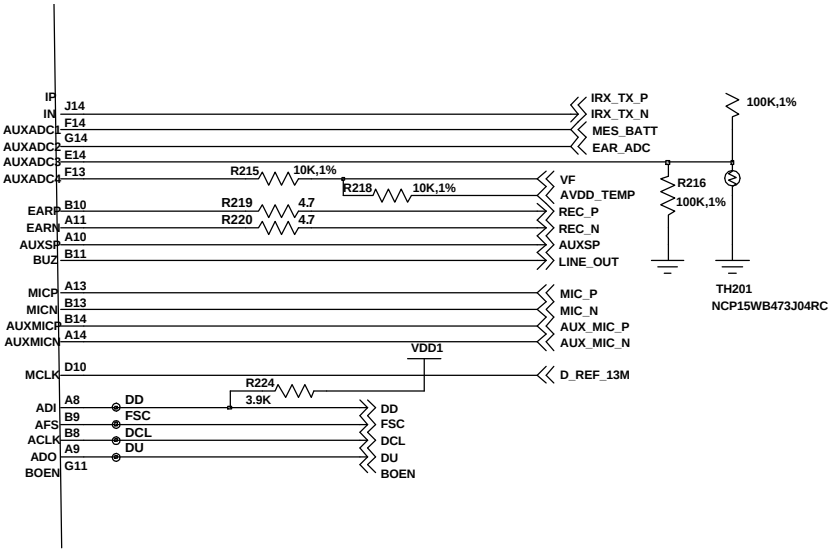

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

9. Back Light (for Color Main LCD)

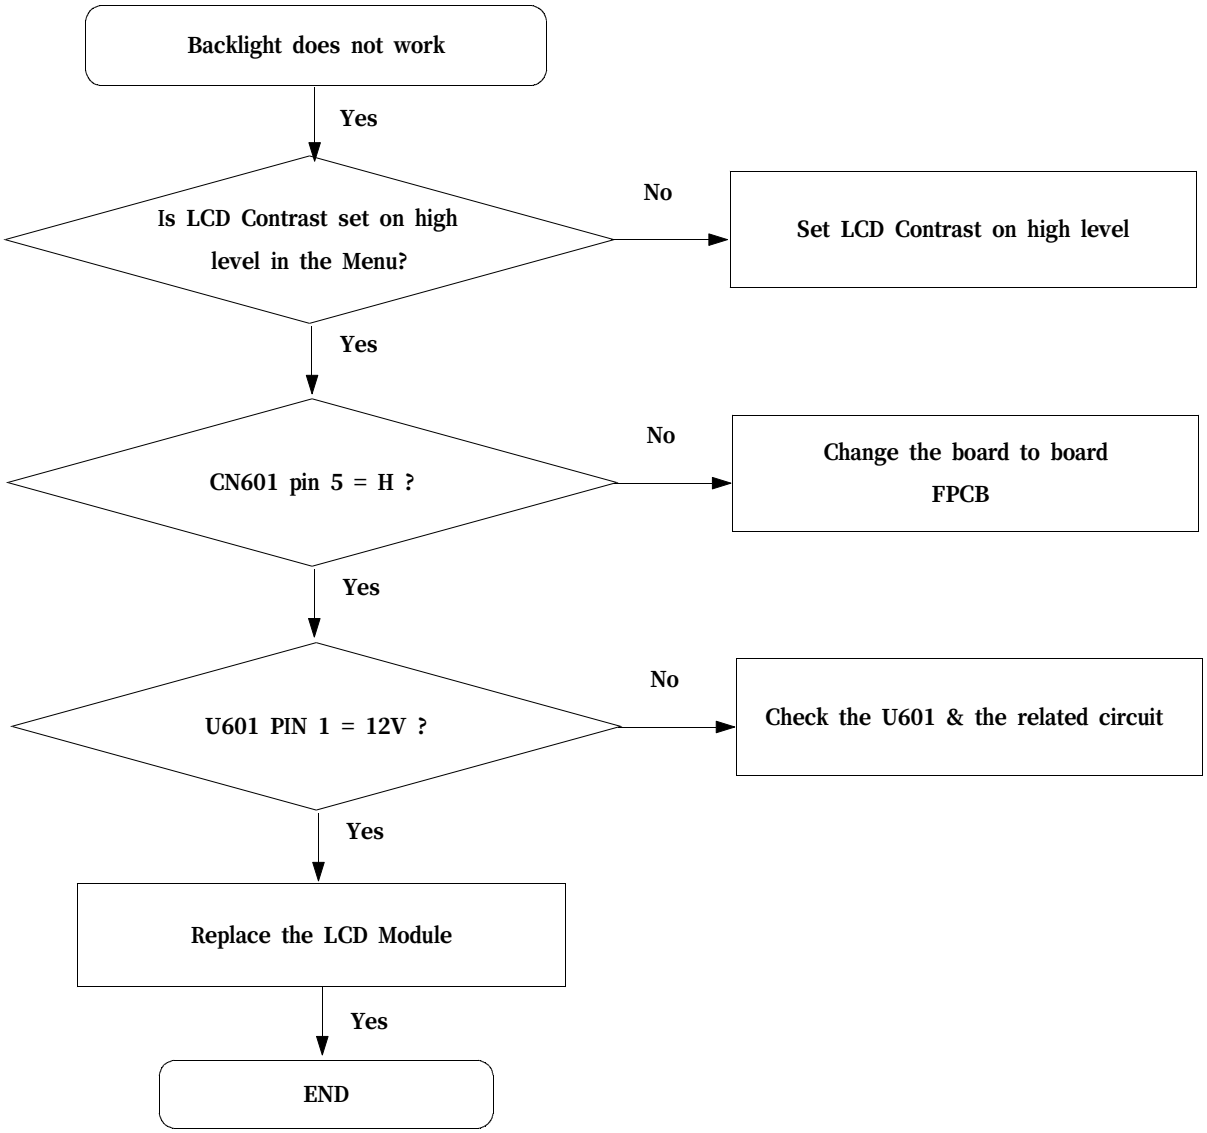

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

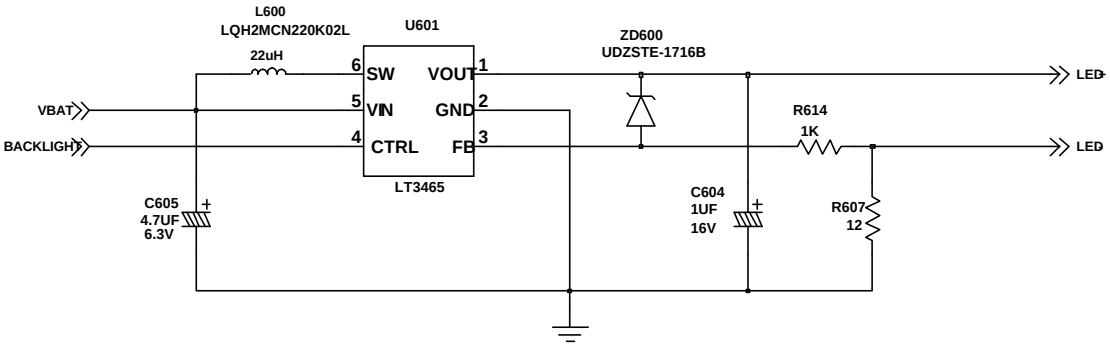

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

10. Key Back Light

1. Main Key Part

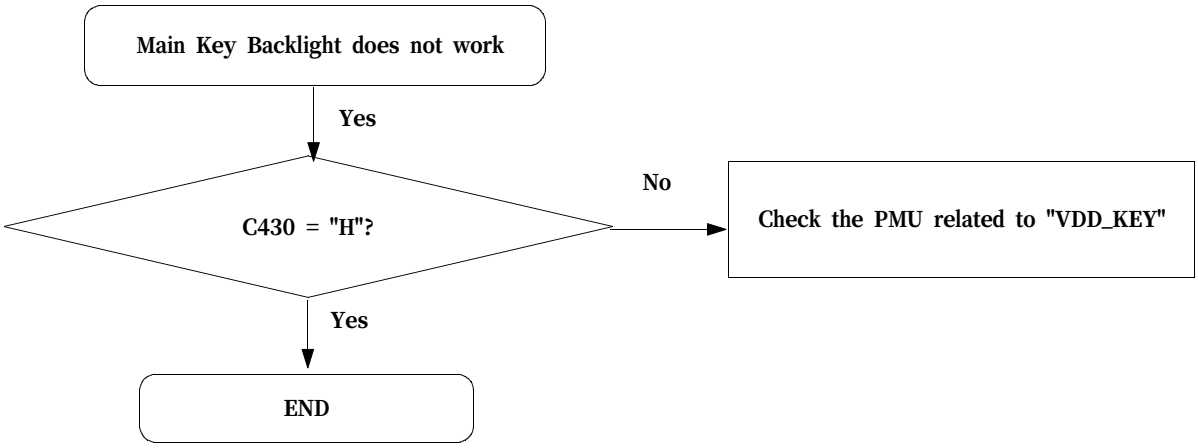

2. Sub Key Part

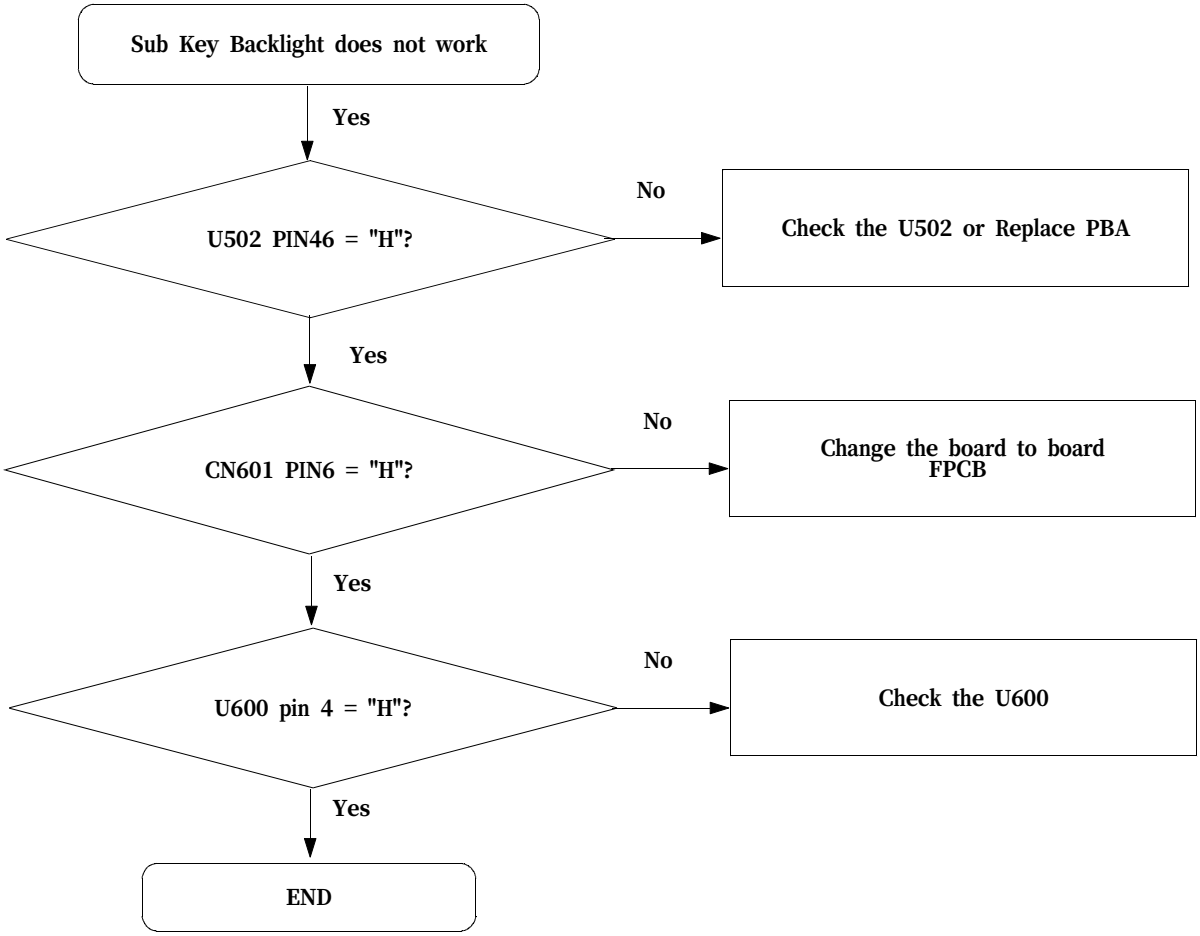

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

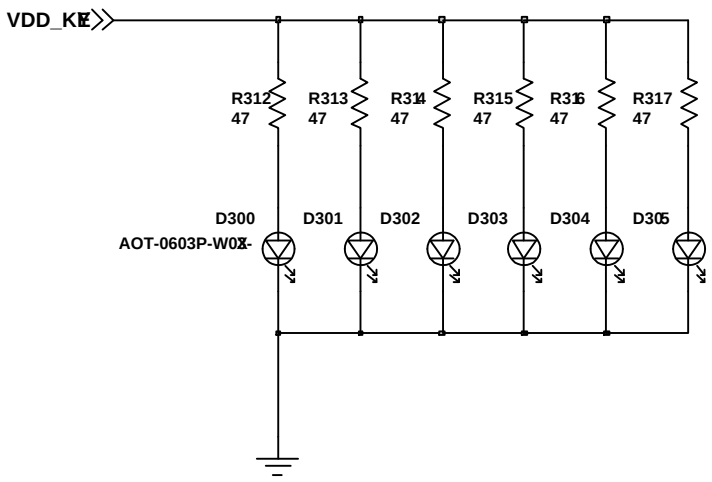

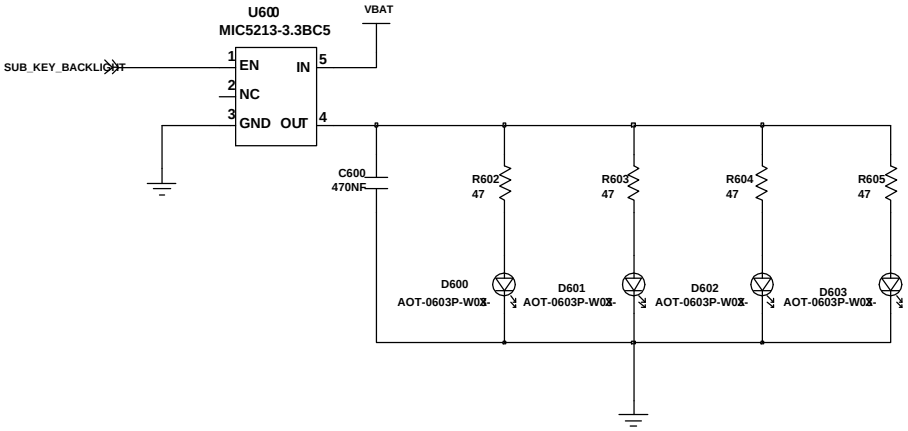

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

11. Camera part

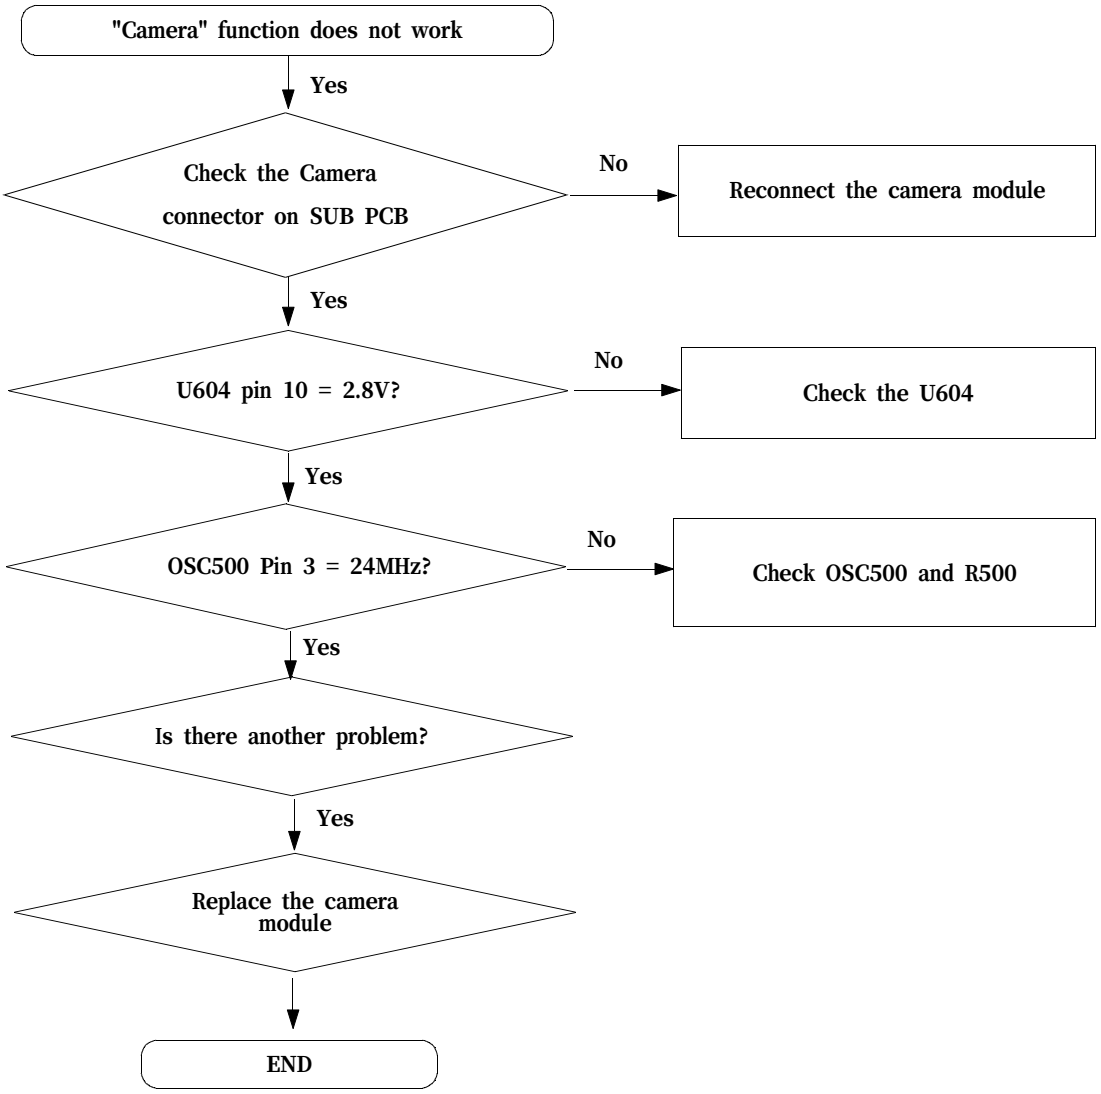

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

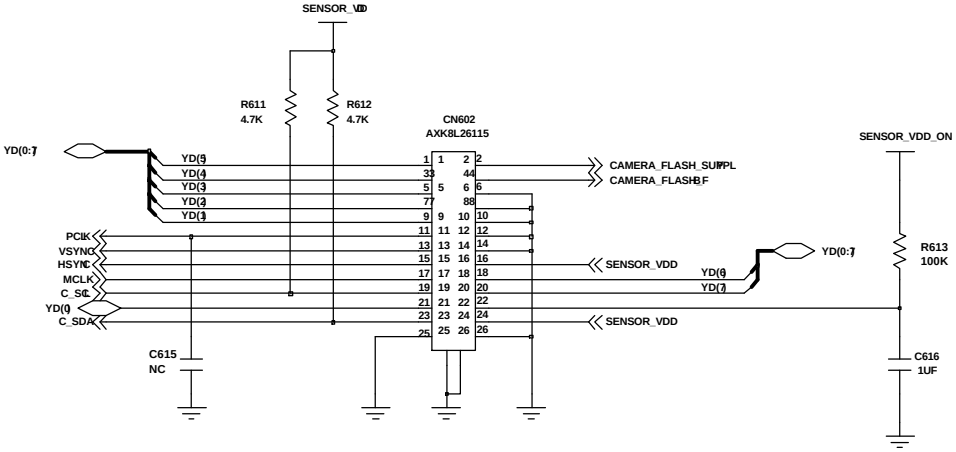

CAMERA_Connector

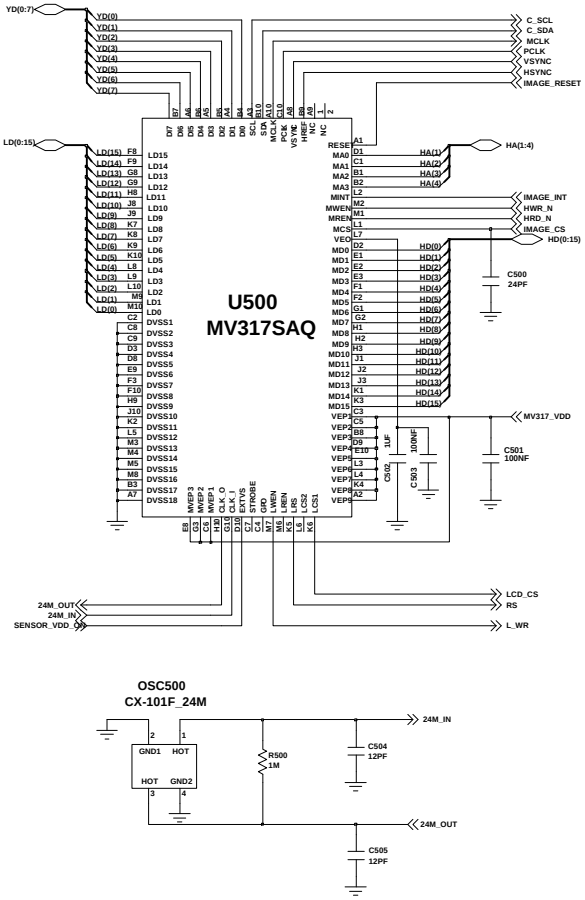

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

12. GSM Receiver

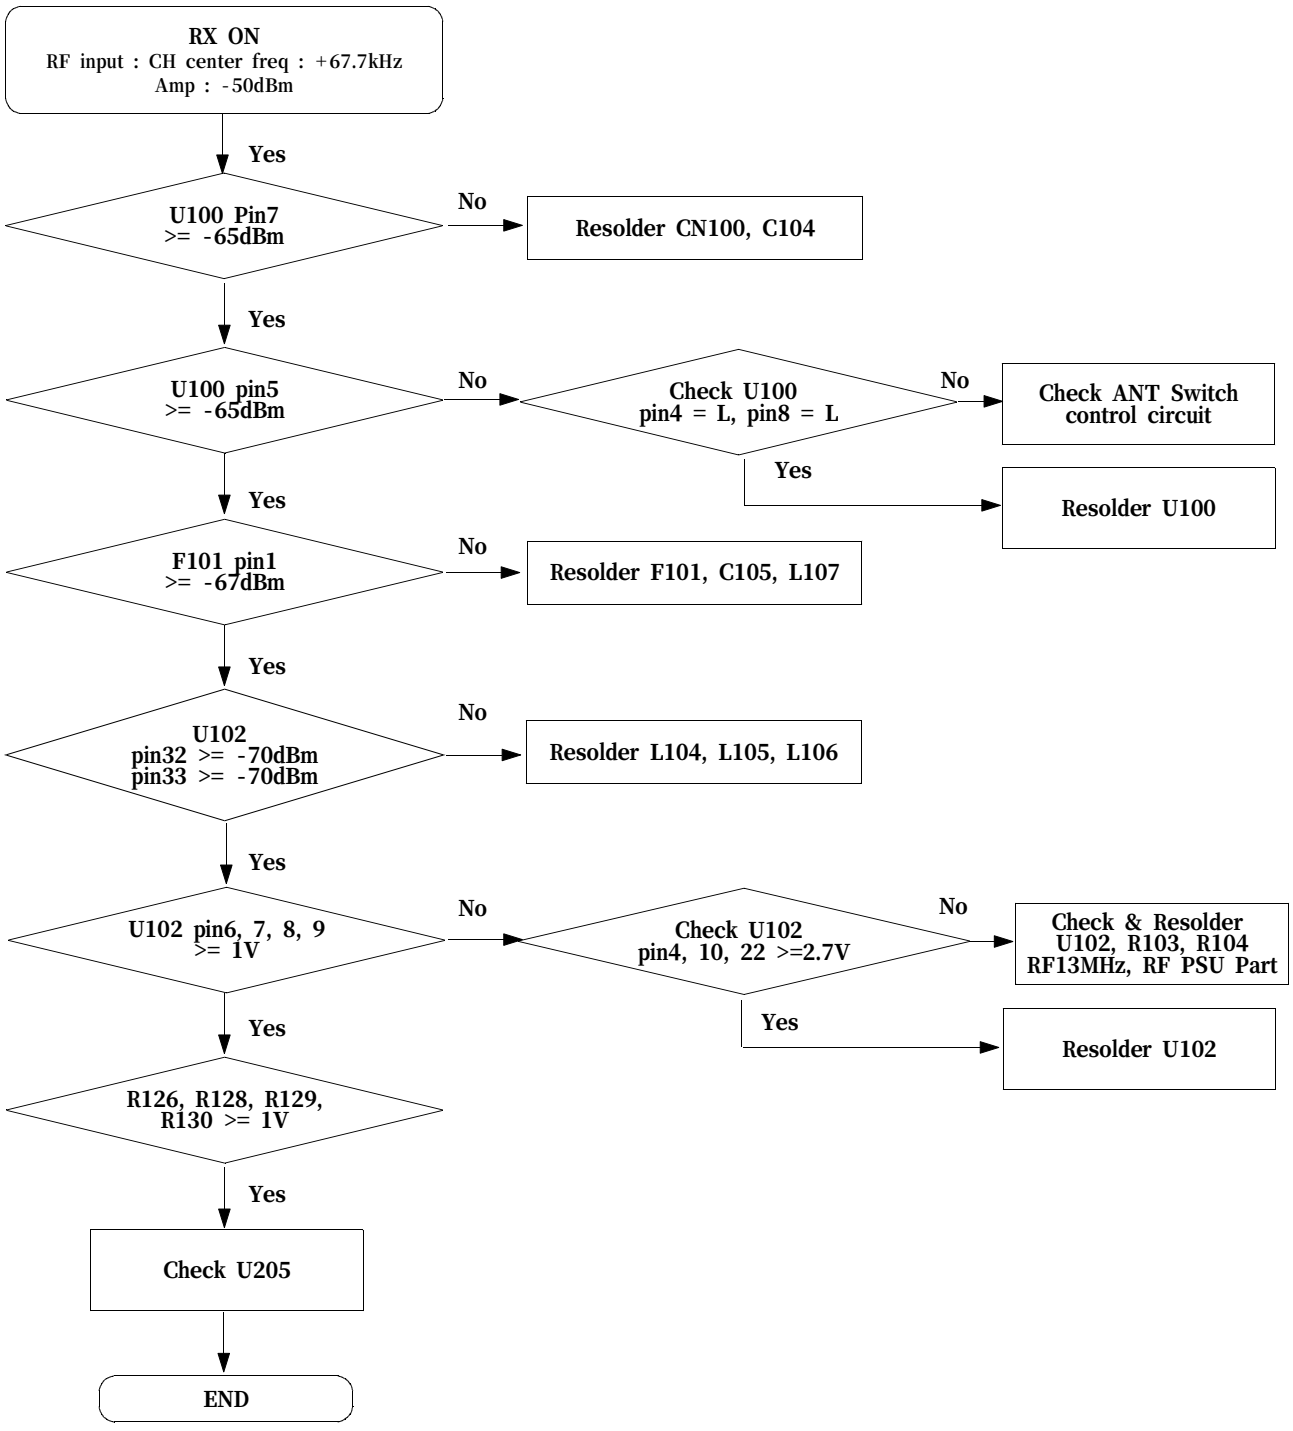

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

13. GSM Transmitter

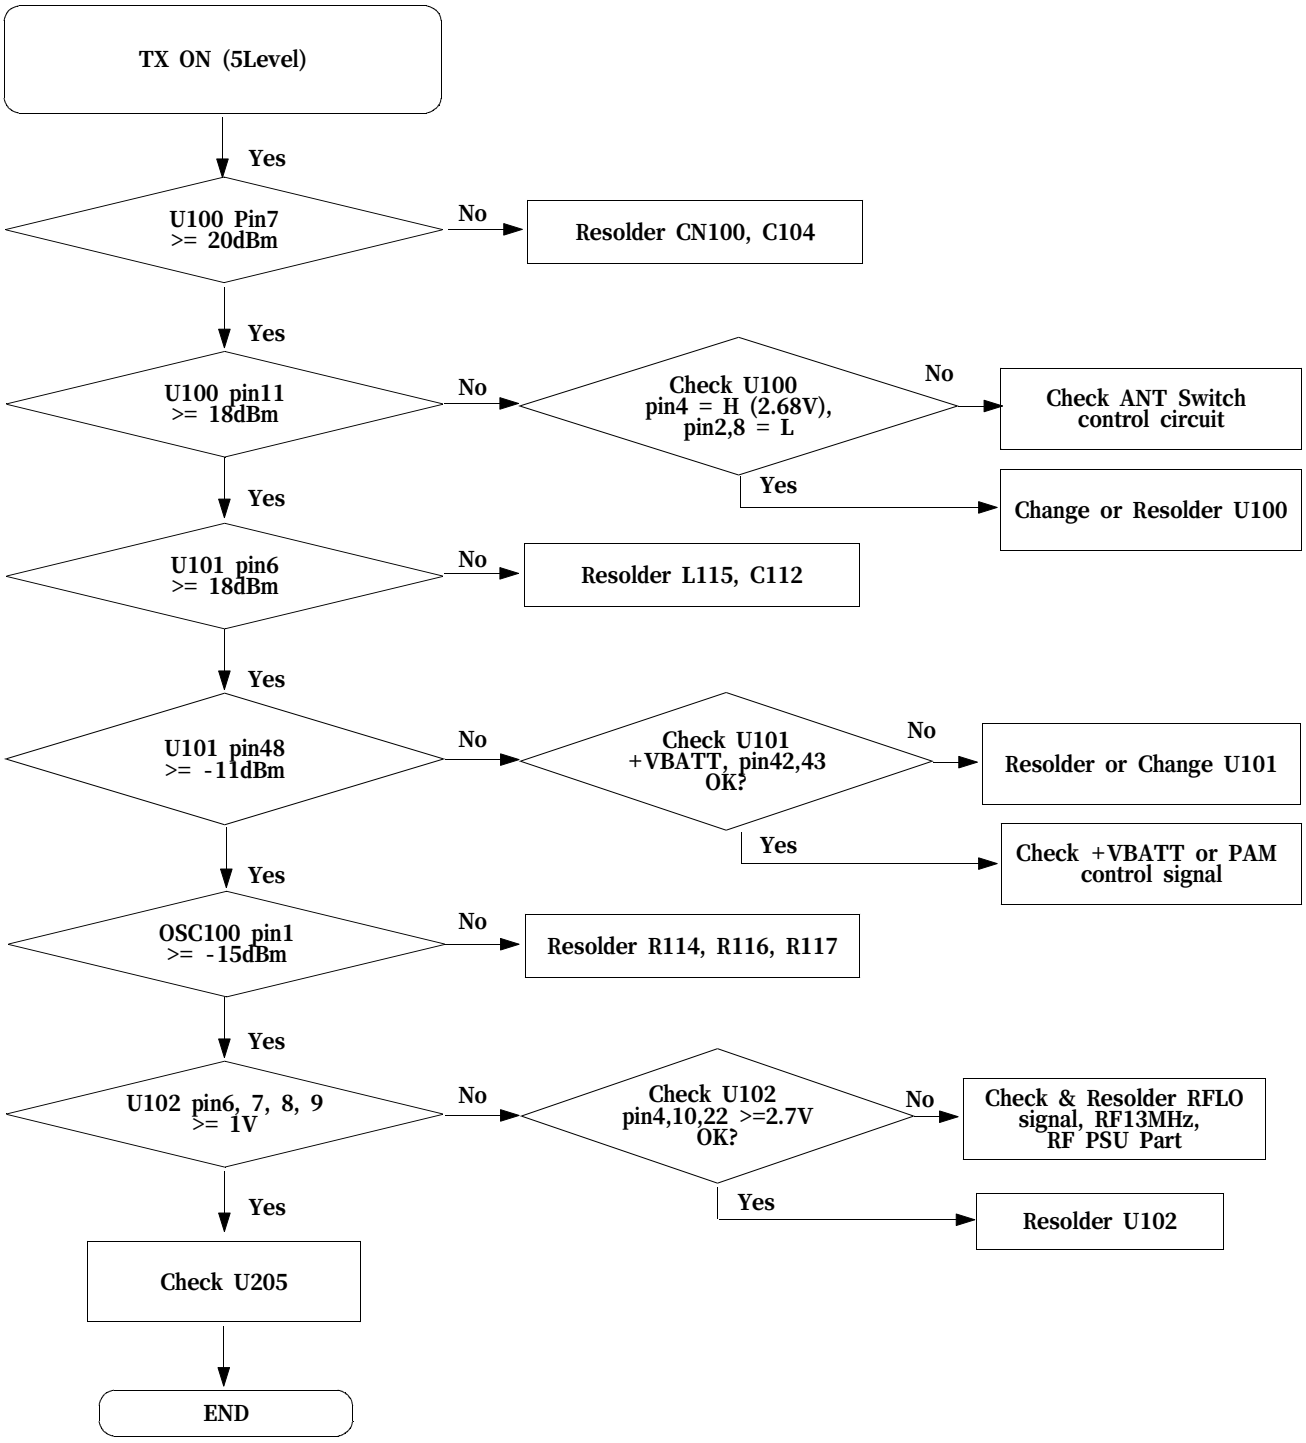

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

14. DCS Receiver

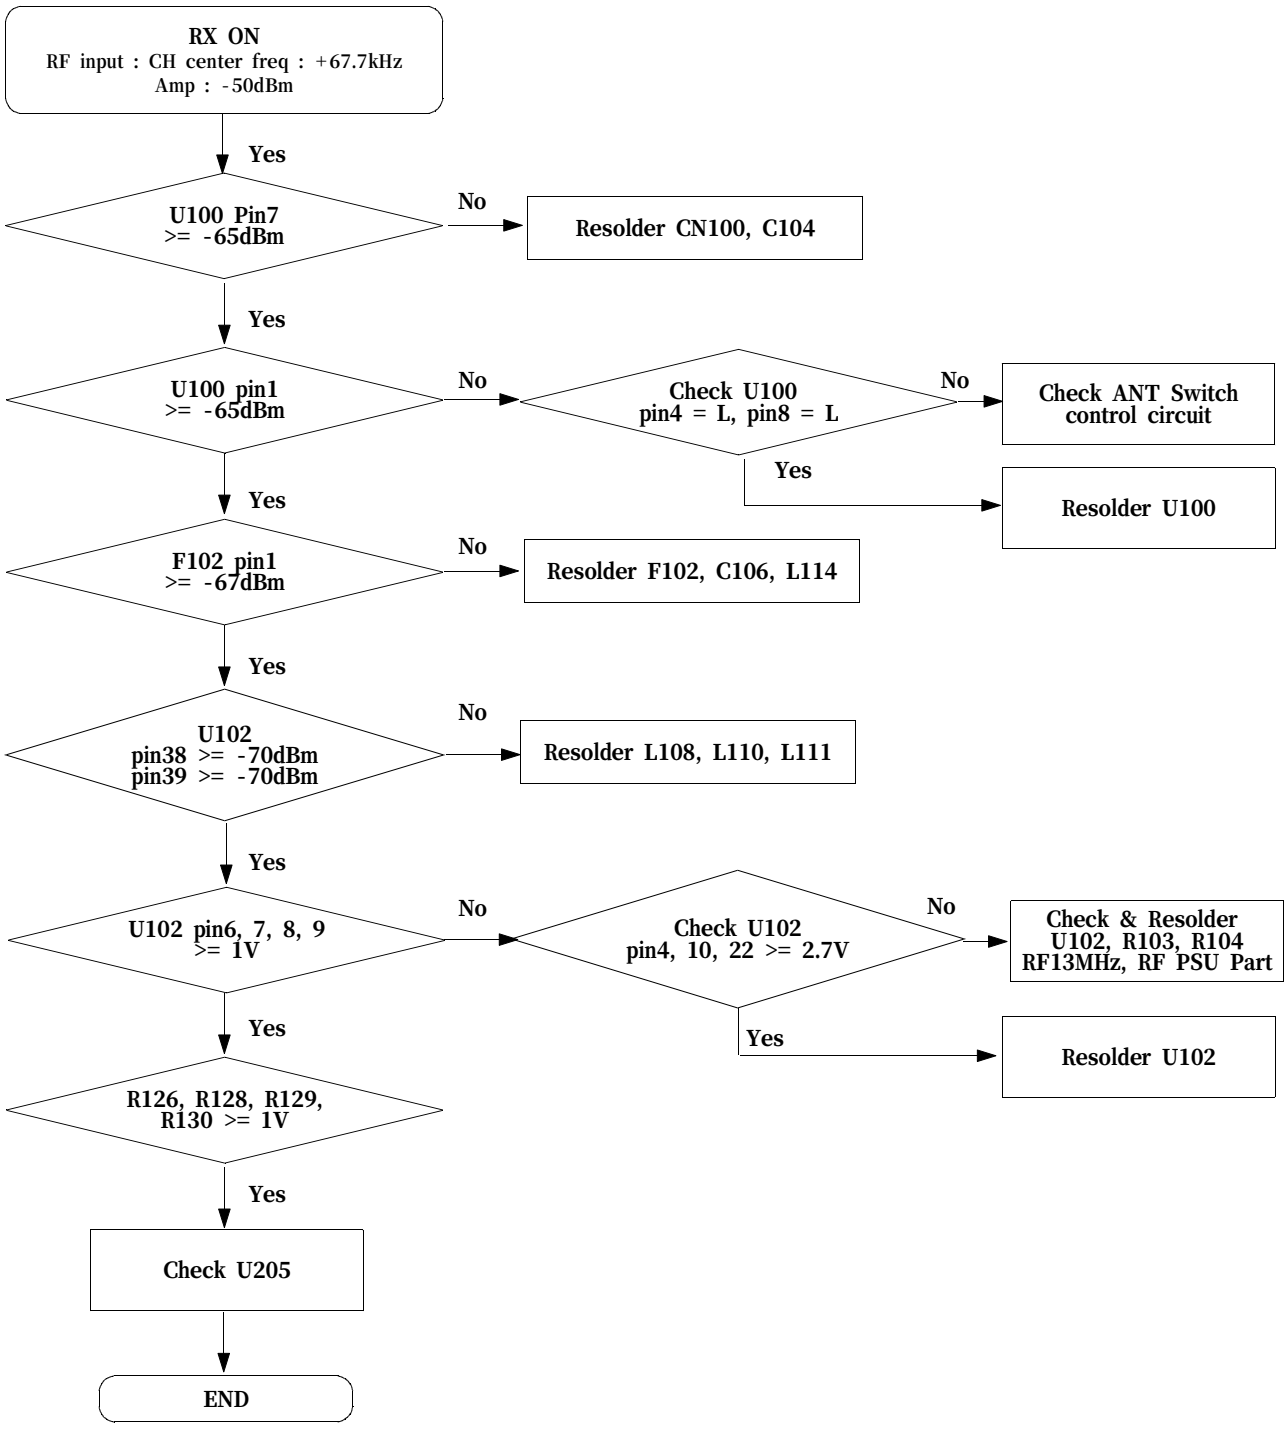

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

15. DCS Transmitter

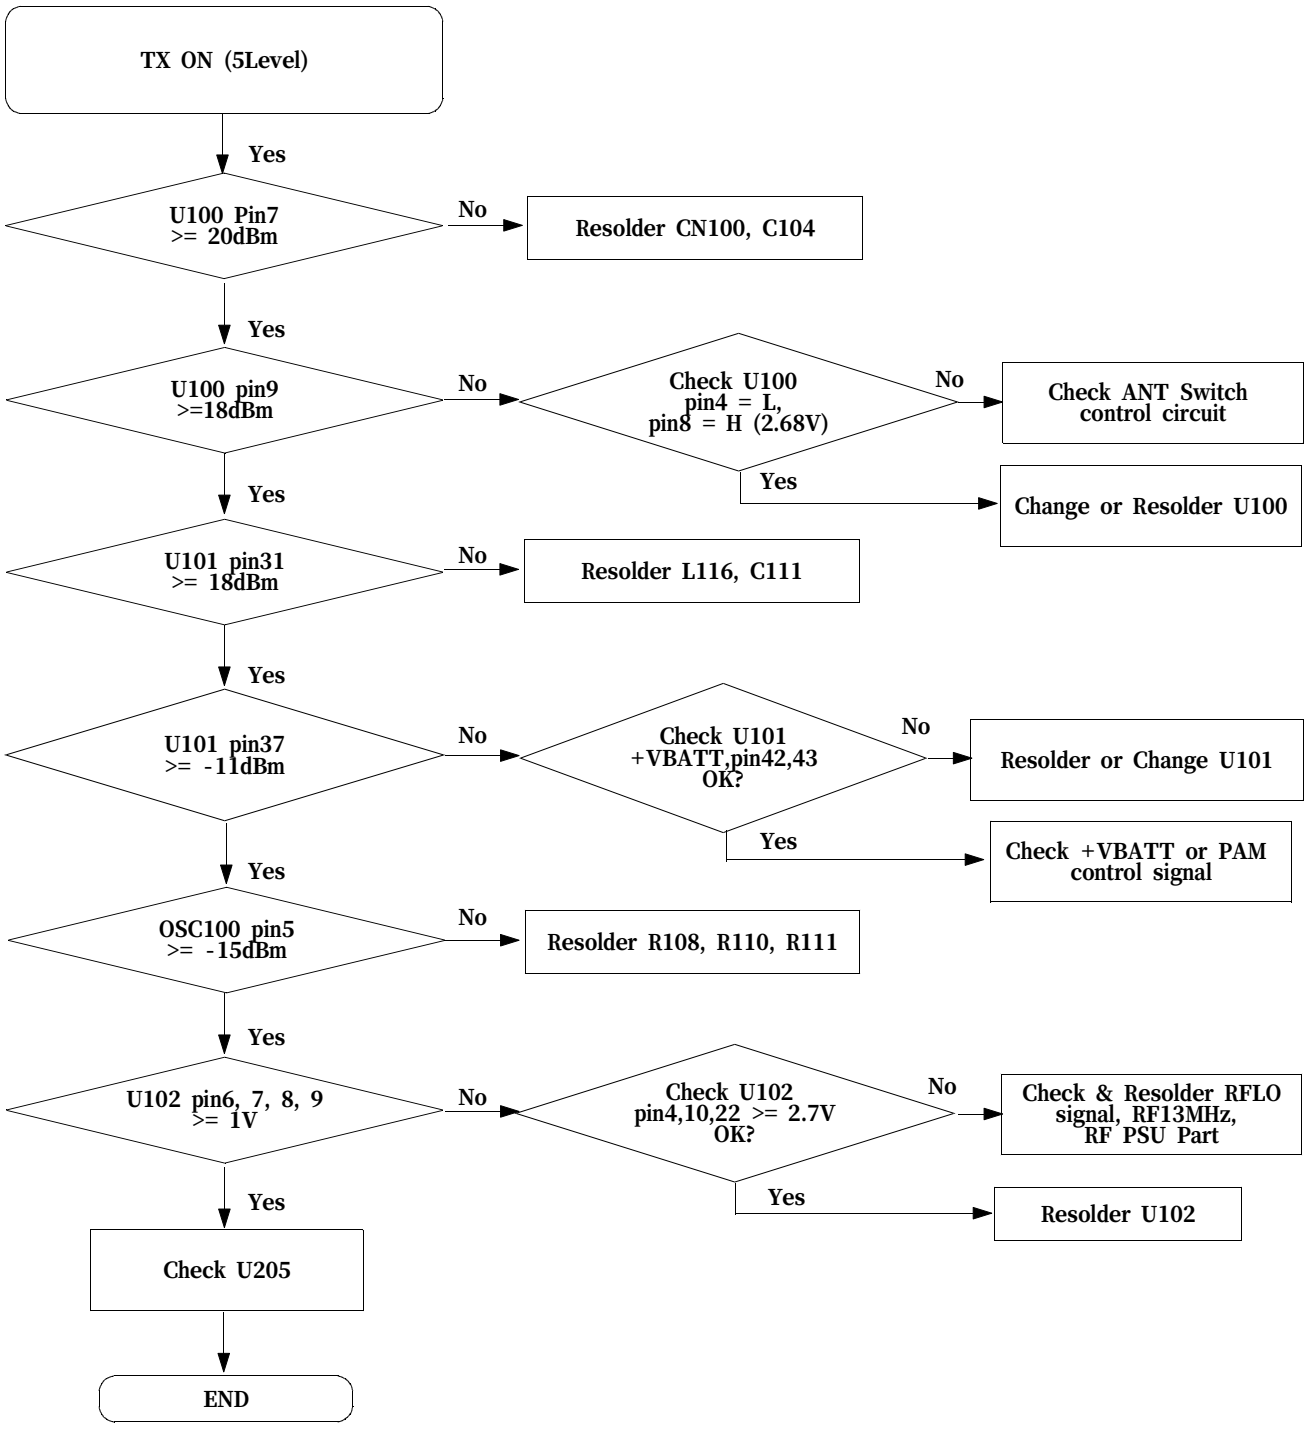

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization

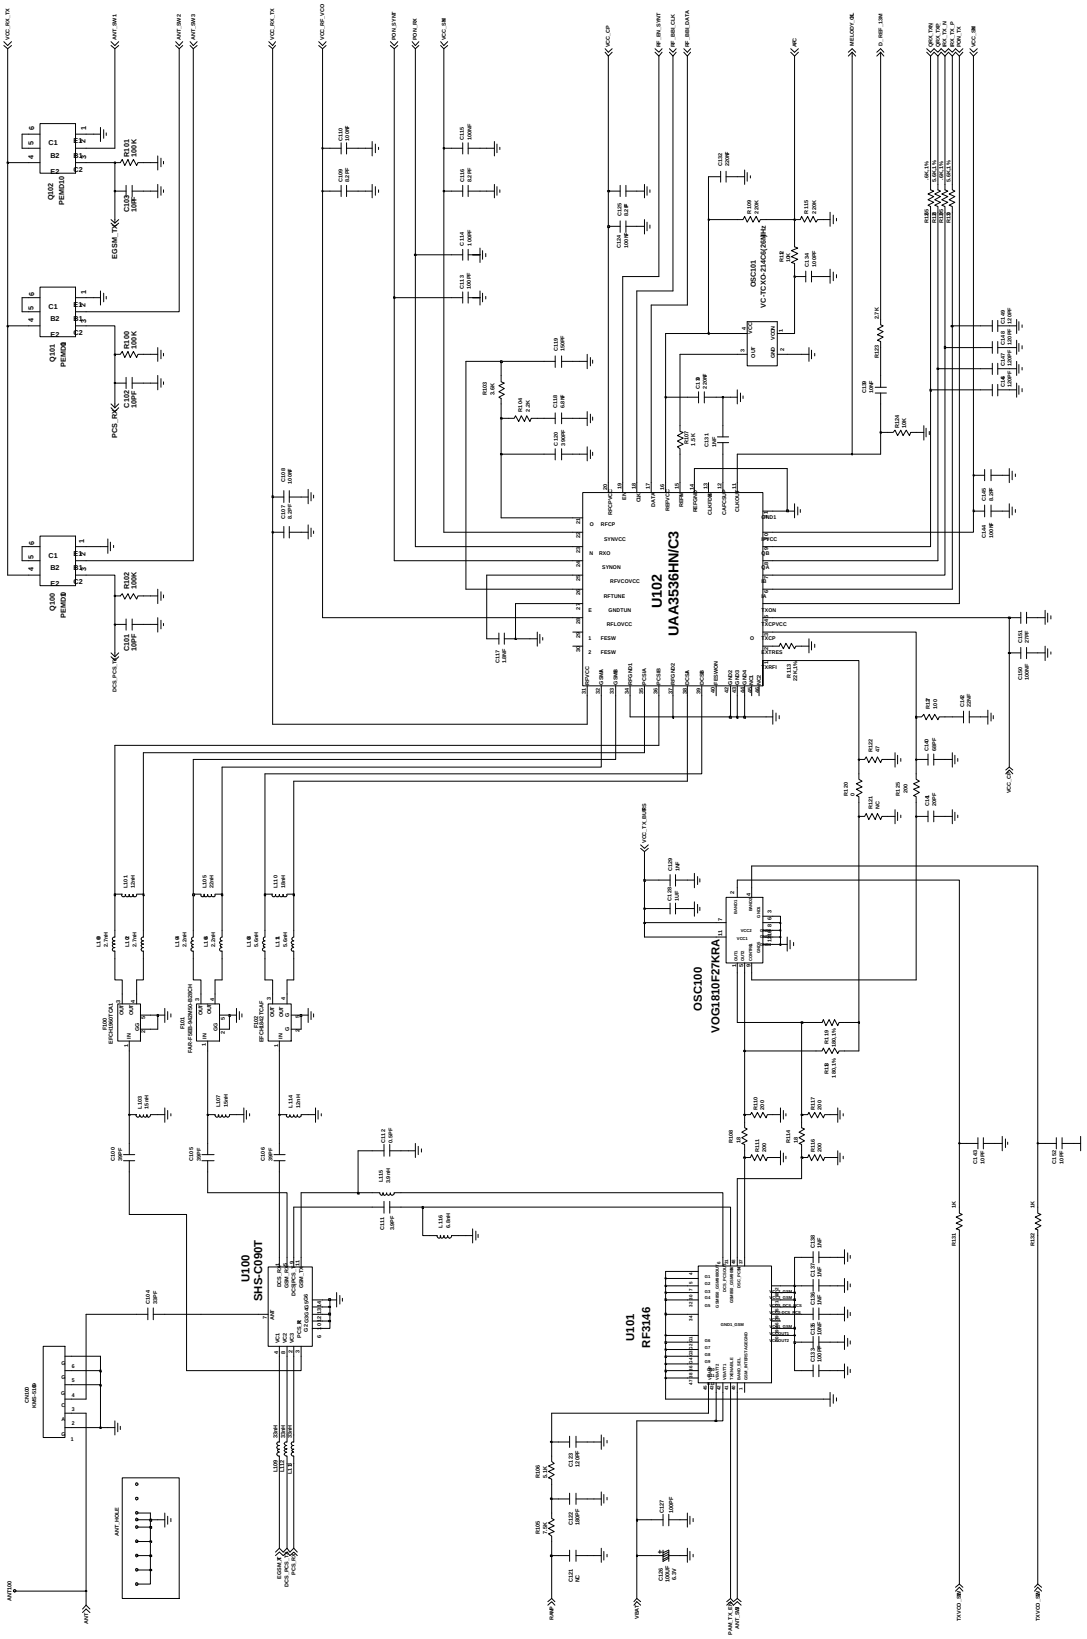

SAMSUNG Proprietary-Contents may change without notice
This Document can not be used without Samsung's authorization